 


OPERATING GUIDE

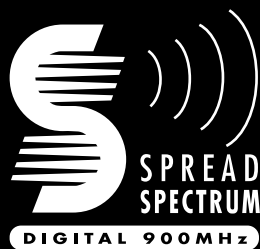

Digital Spread

Spectrum provides

the longest range,

the clearest sound

and the best privacy.

Uniden[®]



Uniden Australia Pty.
Ltd/Uniden New
Zealand Ltd DOES NOT
represent this unit to be
waterproof. To reduce
the risk of fire,
electrical shock or
damage to the unit,
DO NOT expose this
unit to rain or moisture.

PRECAUTIONS

Before you read anything else, please observe the following:

▼ *Rechargeable Nickel-Cadmium Battery Warning*

- 1) This equipment contains a Rechargeable Nickel-Cadmium Battery.
- 2) The Rechargeable Nickel-Cadmium Battery contained in this equipment may explode if disposed of in a fire.
- 3) Do not short-circuit the battery.
- 4) Do not charge the Rechargeable Nickel-Cadmium Battery used in this equipment in any charger other than the one designed to charge this battery as specified in this guide.
- 5) Using another charger may damage the battery or cause the battery to explode.

Rechargeable Nickel-Cadmium Batteries must be disposed of properly



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

▼ *Note for use of this device in New Zealand*

- 1) The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
- 2) Immediately disconnect this equipment should it become physically damaged, and arrange for its disposal or repair.
- 3) This equipment shall not be used in any manner which could constitute a nuisance to other Telecom customers.

CONTENTS

- Introduction 4
 - Welcome 4
 - Features 4
 - Important Safety Instructions 5
 - Included in Your Package 7
 - Controls and Functions 8
- Installing and Adjusting Your Phone 11
 - Desk/Tabletop Installation 11
 - Wall Installation 12
 - Installing the Handset Battery Pack 13
 - Charging the Battery Pack 13
 - Cleaning the Battery Contacts 14
 - Adjusting the Ringer Control 15
 - Adjusting the Earpiece Volume 15
 - Changing the Handset Ringer 15
 - Automatic Digital Code Security 15
- Using Your New Phone 16
 - Making and Receiving Calls 16
 - Redial 16
 - Page 16
 - Call Waiting 17
 - Call Waiting in Australia 17
 - Call Waiting in New Zealand 17
 - Storing a Phone Number in Memory 18
 - Dialing a Stored Memory 18
 - Erasing a Stored Number from Memory 18
 - Chain Dialing 19
 - Travelling Out-of-Range 19
- Troubleshooting 20
 - Quick Reference Chart 20
- Specifications 22
 - Australia 22
 - New Zealand 23
- Warranty 24

WELCOME

Congratulations on your purchase of the Uniden 910 DG Max cordless telephone. This phone is designed for reliability, long life, and outstanding performance utilising the latest in 900 MHz Spread Spectrum technology.

FEATURES

- 15 Channels (Aust)
- 900 MHz Spread Spectrum Technology
- 20 Enhanced Memory Dial Locations
(16 Digits Maximum per Memory)
- 32 Digit Redial
- Redial, Flash, and Pause
- Page
- 14 Day Standby Battery Time
- 5 Hour Talk Time
- Handset Earpiece and Ringer Volume Control
- Call Waiting Compatible
- Auto Talk™
- Auto Standby™
- Any Key Answer

Digital Spread Spectrum Technology utilises a “wider frequency band” vs. a “single narrow band” used in standard digital transmissions. The result is a more secure conversation with the clarity of digital sound, extended range, and minimal interference from other cordless phones.

Random Code™ digital security automatically selects one of over 16,000,000 codes for the handset and base.

These features enhance your phone’s security and also prevent unauthorised calls as a result of your phone being activated by other equipment.



CAUTION

In the event of a storm, unplug your cordless phone from the power source. A strong power surge may damage your phone.



Under power failure, the telephone may not operate. Please ensure that a separate phone, not dependant on local power is available during emergencies.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, these basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons:

- 1) Read and understand all instructions.
- 2) Follow all warnings and instructions marked on the product.
- 3) Unplug this product from the wall outlet before cleaning, and use a dry cloth, without liquid or aerosol cleaners.
- 4) Do not use this product near water; for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- 5) Do not place this product on an unstable cart, stand or table. The telephone may fall, causing serious damage to the unit.
- 6) This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
- 7) Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
- 8) Do not overload wall outlets and extension cords, as this can result in the risk of fire or electrical shock.
- 9) Never push objects of any kind into this product through cabinet slots, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 10) To reduce the risk of electric shock, do not disassemble this product. Take it to qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.



To reduce the risk of fire or injury to persons by the battery, read and follow these instructions.

- 11) Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. If the power supply cord is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally when following the operating instructions. (Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage, and will often require extensive repair work by a qualified technician).
 - E. If the product has been dropped, or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
- 12) Do not use the telephone to report a gas leak in the vicinity of the leak.

INCLUDED IN YOUR PACKAGE

TIP

To get the most from your phone, please read this owner's manual thoroughly. Also be sure to complete and mail the product registration form.

NOTE

If any of these items are missing or damaged, contact the place of purchase.



Handset



Base



Wall Mount Bracket



AC Adaptor



 
Wall Mounting Screws




Telephone Cord and plug (Aust only)



Rechargeable Battery

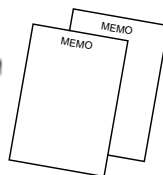

2X Memory Stickers

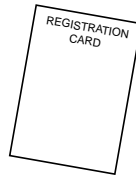 


Registration Card





This Owner's Manual

 CONTROLS AND FUNCTIONS

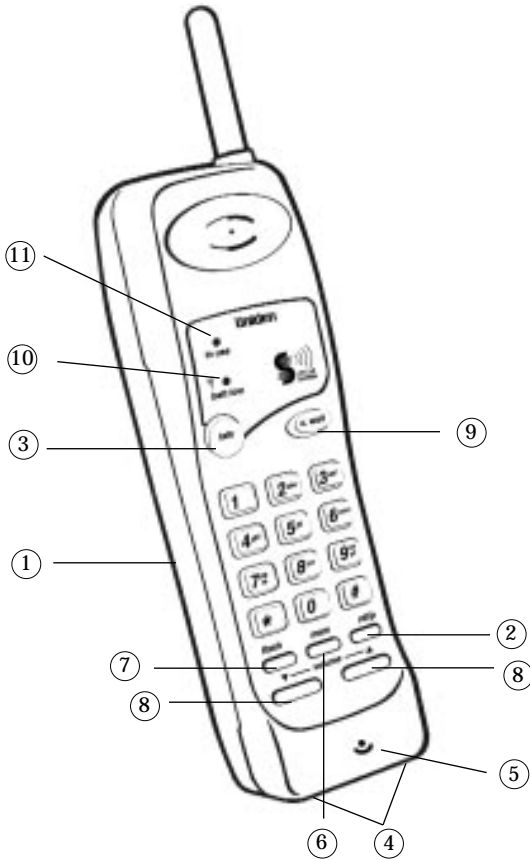

- | | |
|------------------------|-----------------------|
| 1) Battery Compartment | 7) Flash |
| 2) Redial/Pause | 8) Volume Up and Down |
| 3) Talk | 9) C Wait |
| 4) Charging Contacts | 10) in use LED |
| 5) Handset Microphone | 11) batt low LED |
| 6) Mem | |

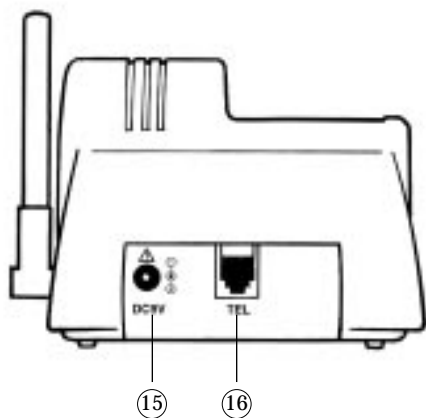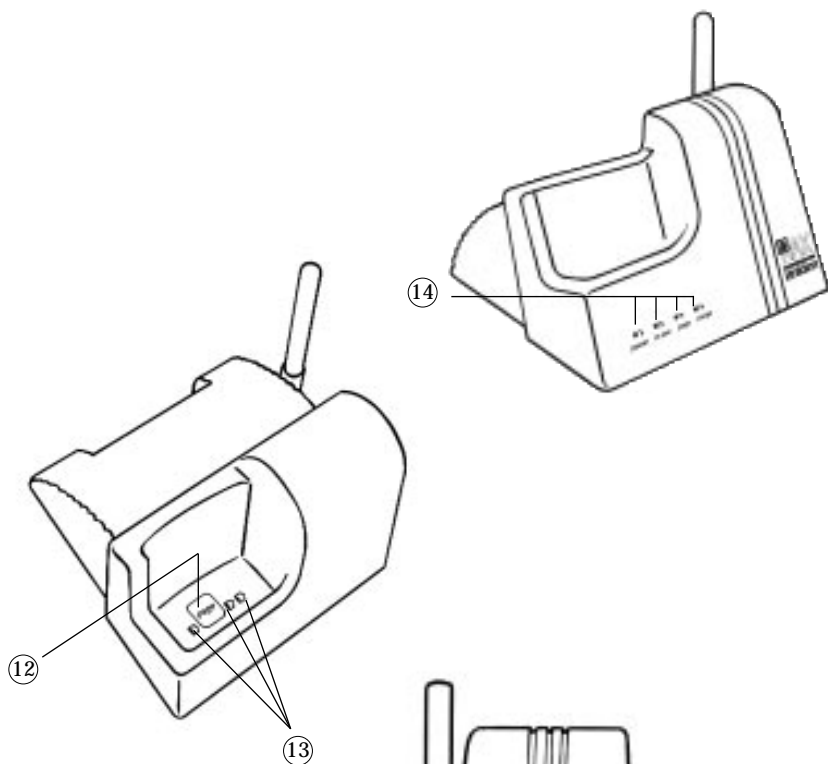  


- 12) Page
- 13) Base Charging Contacts
- 14) Status LED's (power, in use, page, charge)
- 15) DC in 9V
- 16) Tel Line

This Page is intentionally left blank

TIP

Before choosing a location for your phone, read the "Important Safety Instructions" on page 5.

 DESK/TABLETOP INSTALLATION

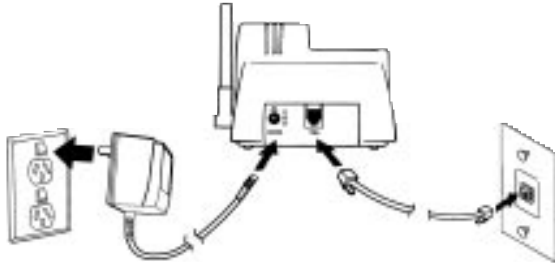

INSTALLING AND ADJUSTING

- 1) Plug the AC adaptor cord into the 9 VDC input jack on the back of the base.
- 2) Plug the AC adaptor into a standard 230/240 VAC wall outlet.
- 3) Charge the battery (refer to "Charging the Battery Pack," page 13).
- 4) Plug one end of the telephone cord onto the TEL LINE jack on the back of the base.
- 5) Plug the other end of the cord into your telephone jack on the wall.



Use only the Uniden AC adaptor supplied with this phone.

- 6) Set the base on a desk or tabletop and place the handset into the base as shown. Then, raise the antenna to a vertical position.



INSTALLING AND ADJUSTING YOUR PHONE

CAUTION

Place the power cord so that it does not create a trip hazard or where it could become chafed and create a fire or electrical hazard.

HINT

Before using your phone, fully charge the Nickel-Cadmium battery pack for 12-15 hours.

 
INSTALLING AND ADJUSTING YOUR PHONE

▼ Wall Installation

You can mount your phone directly to the wall. Before doing this, consider the following:

- Select a location away from electrical cables, pipes, or other items behind the mounting location. Inserting screws into areas such as this can be hazardous.
- Try to mount your phone within 10 - 15 feet of a working phone jack in order to avoid excessive cord lengths. Remember, you are not mounting to a wall plate with a built in phone jack.
- If the selected mounting area has no wooden support beams directly behind it, you will need the appropriate anchoring devices in order for the wall to properly support your phone.

- 1) Insert two mounting screws into the wall, with their appropriate anchoring device if necessary, 83mm apart. Allow about 5mm between the wall and screwheads for mounting the phone.

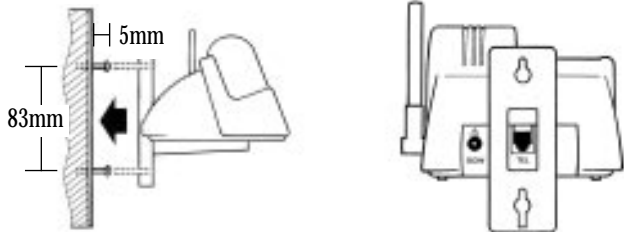

- 2) Attach the wall mount bracket into place on the bottom of the phone.
- 3) Plug the AC adaptor into the base.
- 4) Plug the AC adaptor into a standard 230-240 VAC wall outlet.
- 5) Plug one end of the telephone cord into the TEL LINE jack on the back of the base, then plug the other end into a standard telephone jack.
- 6) Line up the mounting slots on the wall mount bracket with the mounting screws on the wall, then push in and down until the phone is firmly seated.

CAUTION

Use only the Uniden battery supplied with your phone.

NOTE

The black lead will be on the right when the plug is properly aligned.

INSTALLING THE HANDSET BATTERY PACK

- 1) Press in on the battery cover release and slide the cover down until it comes off.
- 2) Align the plastic connector of the Nickel Cadmium battery pack with its socket and plug it in.
- 3) Place the battery pack inside. Please observe how the lead is positioned.
- 4) Slide the battery cover on until it snaps into place.



CHARGING THE BATTERY PACK



▼ Initial Battery Charging

Before plugging the phone line into your new phone for the first time, fully charge the rechargeable battery pack for 12-15 hours without interruption.

- 1) Place the handset on the base.
- 2) Make sure that the *charge* LED lights. If the LED doesn't light, check to see that the AC adaptor is plugged in and that the handset makes good contact with the base charging contacts.



▼ *Low Battery Indicator*

The low battery indicator shows when the battery needs to be re-charged. If the phone is not in use, *batt low*/ LED flashes every three seconds and beeps once every 30 seconds. If the phone is in use, the *batt low*/ LED flashes every three seconds and the earpiece speaker beeps. Complete your conversation as quickly as possible and return the handset to the base for charging.



CLEANING THE BATTERY CONTACTS

To maintain a good charge, clean all charging contacts on the handset and base about once a month with a pencil eraser or other contact cleaner. DO NOT use liquids or solvents; you may damage your phone.

ADJUSTING THE RINGER CONTROL

When the phone is either charging or in standby mode, pressing the ▼ or ▲ key on the handset selects the handset ringer volume. There are two ringer volume settings; high and low.

ADJUSTING THE EARPIECE VOLUME

There are four volume settings for the handset earpiece; high, normal, medium, and low. The handset earpiece volume can only be adjusted during a call. To lower the volume, press ▼. To raise the volume, press ▲.

CHANGING THE HANDSET RINGER

When the phone is either charging or in standby mode,

- 1) Press *flash* button.
- 2) Press 1,2,3 or 4 on the keypad to select ringer tone. The tone will automatically be programmed in.



AUTOMATIC DIGITAL CODE SECURITY

To prevent other parties from making unauthorised calls on your phone line, a digital code was added to the DG 910. Your phone's handset and base share this code, which is randomly set each time you place the handset in the charging cradle.

To re-establish communication between the handset and the base in the event of a power failure

- 1) Restore power to the base
- 2) Place the handset on the base. The *in use* LED blinks to indicate that the digital security code is reset.

MAKING AND RECEIVING CALLS

	Handset On Base 	Handset Off Base 
To answer a call	Pick up the handset.	Press any button.
To make a call	1 Pick up the handset. 2 Press <i>talk</i> . 3 Listen for the dial tone. 4 Dial the number.	1 Press <i>talk</i> . 2 Listen for the dial tone. 3 Dial the number.
To hang up	Press <i>talk</i> , or return the handset to the base (AutoStandby).	

 
REDIAL

If a number you have dialed is engaged, or you would like to call back the last number dialed,

- 1) Press *talk*.
- 2) Listen for the dial tone.
- 3) Press *rdl/p*

PAGE

To locate the handset (while it's off the base), press *page* on the base. The handset beeps for about 15 seconds.

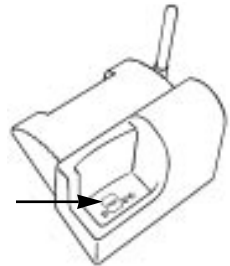

CALL WAITING

▼ *Call Waiting in Australia*

Accessing the Call Waiting Service Using the C Wait Button

- 1) While talking, you will hear the call waiting signal (series of beep tones).
- 2) Press the *c wait* button to switch call and put the current call on hold.
- 3) To switch back to original call, press the *c wait* button again.

Accessing the Call Waiting Service Using the Flash Button

- 1) While talking, you will hear the call waiting signal (series of beep tones).
- 2) Press the *flash* button then *2* to switch call and put the current call on hold.
- 3) To switch back to original call, press the *flash* button then *1*.

▼ *Call Waiting in New Zealand*

You must subscribe to Telecom's Call Waiting Service before you can use this feature. Please call Telecom to check on the availability of this feature in your area.

Accessing the Call Waiting Service Using the C Wait or Flash Button

- 1) While talking you hear the Call Waiting beep signal.
- 2) Press the *c wait* or *flash* button. This feature sends a 600mS timed "hook-flash" on the telephone line for accessing services such as Call Waiting, etc.



NOTE

The *flash + 2* call waiting procedure toggles call between the incoming and the original call (vice versa). The *flash + 1* procedure will drop the current call connection and pick up the incoming call or the call on hold.



NOTE

You must subscribe to Telecom's Call Waiting Service before you can use this feature.



NOTE

The *rdl/p* button counts as one digit. Pressing *rdl/p* on the handset, more than once increases the length of pause between numbers.



NOTE

An error sounds and the erase procedure will be cancelled if more than 30 seconds elapse between each keystroke.

STORING A PHONE NUMBER IN MEMORY

- 1) Remove the handset from the base.
- 2) Press *mem* and the *in use* LED blinks.
- 3) Enter the phone number, up to 16 digits. If a pause is needed during dialing to access a long distance service, press *rdl/p*.
- 4) Press *mem* again.
- 5) Enter a two digit memory location (01-20) on the keypad. The *in use* LED will stop flashing and a tone indicates that the number is stored.

DIALING A STORED MEMORY

▼ *Using the memory location features*

- 1) Press *talk*.
- 2) Press *mem*.
- 3) Enter the memory location (01-20) on the keypad. The number automatically dials.

ERASING A STORED NUMBER FROM MEMORY

- 1) Remove the handset from the base unit.
- 2) Press the *mem* button twice.
- 3) Press the memory location (01-20).
A tone indicates that the stored number is erased from memory.

CHAIN DIALING

On certain occasions after dialing a number, you may be requested to enter an access code, such as your account number. You can enter this number into a memory location for later use by doing the following.

- 1) Store the access code into one of the memory locations (01-20).
- 2) Dial the party or service main number.
- 3) When you need to enter the special number, press *mem* followed by the memory location (01-20)



When out of range, the *batt low* LED will start to flash and the handset beeps twice every 15 seconds.

TRAVELLING OUT-OF-RANGE

As you begin to move too far from your base unit, you will hear a clicking sound. As you travel further out-of-range, the voice transmission will begin to break up. If you pass the range limits of the base unit, your call will terminate.

QUICK REFERENCE CHART

If your phone is not performing to your expectations, please try these simple steps before calling Uniden customer service.

AUSTRALIA 1800 632 789

NEW ZEALAND 0800 4 UNIDEN
0800 4 864336

PROBLEM	SUGGESTION
The charge light won't come on when the handset is placed in the base.	<ul style="list-style-type: none"> • Make sure the AC Adaptor is plugged into the Base Unit and wall outlet. • Make sure Handset is properly seated in Base. • Make sure that the charging contacts on the Handset and Base Unit are clean.
Audio sounds weak and/or scratchy.	<ul style="list-style-type: none"> • Make sure that the Base antenna is in a vertical position. • Move the Handset and/or Base to a different location away from metal objects or appliances and try again.
Can't make or receive calls.	<ul style="list-style-type: none"> • Check both ends of the Base telephone line cord. • Make sure the AC Adaptor is plugged into the Base and wall outlet. • Disconnect the AC Adaptor for a few minutes, then reconnect it. • Place the handset back on the charging cradle for a few seconds. The <i>in use</i> LED will blink indicating that the phone has been reset.
Handset doesn't ring or receive a page.	<ul style="list-style-type: none"> • The Nickel-Cadmium battery pack may be weak. Charge the battery on the base unit for 12-15 hours. • The handset may be too far away from the base unit. • Place the base unit away from appliances or metal objects. • Place the handset back on the charging cradle for a few seconds. The <i>in use</i> LED will blink indicating that the phone has been reset.

PROBLEM	SUGGESTION
No dial tone	<ul style="list-style-type: none"> • Check for the telephone line cord connectors at both ends that they are pushed in firmly until they click. • If you had a power failure or had unplugged the base unit, replace the handset on the base unit for two to five seconds to reset the system.
Does not ring	<ul style="list-style-type: none"> • You may have exceeded the Ringer Equivalence Number(REN) limit of how many phones can be connected to the same line. The REN total of all devices(printed on the bottom label of each unit) should not exceed three(3). Disconnect the appropriate units to lower the REN total.
No power on the handset unit	<ul style="list-style-type: none"> • Check the Ni-Cd battery pack connection inside the battery compartment on the handset. • The handset rechargeable Ni-Cd battery pack may need to be charged.
Does not charge	<ul style="list-style-type: none"> • Make sure the charging contacts on both the base unit and the handset are in contact during charging. • The charging contacts may need to be cleaned refer to page 5, No 3 or page 14. • The Ni-Cd battery pack may need to be discharged first before a full charge.
Range is limited	<ul style="list-style-type: none"> • Raise or reposition the antenna on the base or handset. • Move the base unit so that it is centrally located in your residence or office and make sure that the base unit is not located near appliances.
Calls received flutters or fades	<ul style="list-style-type: none"> • The handset rechargeable Ni-Cd battery pack may need charging. • You may be out of normal operating range. Move closer to the base unit.
Cannot store or recall phone numbers from memory	<ul style="list-style-type: none"> • When storing phone numbers, make sure that the handset is in the standby position. • When recalling stored phone numbers, check first for a dial tone. • Always use two digits when entering/recalling memory index numbers.

AUSTRALIAN SPECIFICATIONS

General

The DG 910 complies with TS001, TS002, TS004, AS/NZ3260, ACA Radio Communications Class Licence (Spread Spectrum Devices).

Frequency Control: PLL
 Modulation: Direct Sequence Spread Spectrum; DBPSK
 Operating Temperature 0° to 50° C

Base

Frequency: 915 to 928 Mhz (15 Channels)
 Size: 132mm (W) x 115mm (D) x 102mm (H)
 (including antenna)

Weight: Approx. 220g.
 Power Source: AC Adaptor
 Approval No. V96295
 Input: 240VAC, 50Hz
 Output: 9VDC, 300mA

Handset

Frequency: 915 to 928 Mhz (15 Channels)
 Power Requirements: Rechargeable Nickel-Cadmium Battery pack
 Size: (including antenna) 49mm (W) x 28mm (D) x 190mm (H)
 Weight: Approx. 158g (including battery)
 Battery: BT-990
 Capacity: 600 mAH 3.6V
 Talk Mode: 5 hours
 Standby Mode: 14 Days

Specifications, Features and availability of Optional Accessories are all subject to change without prior notice.

NEW ZEALAND SPECIFICATIONS

General

The DG 910 complies with PTC200, RFS29.

Frequency Control: PLL
Modulation: Direct Sequence Spread Spectrum; DBPSK
Operating Temperature 0° to 50° C

Base

Frequency: 921 to 929 Mhz (15 Channels)
Size: 132mm (W) x 115mm (D) x 102mm (H)
(including antenna)
Weight: Approx. 219g. (including optional Battery)
Power Source: AC Adaptor
Approval No. V96295
Input: 240VAC, 50Hz
Output: 9VDC, 300mA

Handset

Frequency: 921 to 929 Mhz (15 Channels)
Power Requirements: Rechargeable Nickel-Cadmium Battery pack
Size: (including antenna) 49mm (W) x 28mm (D) x 190mm (H)
Weight: Approx. 158g (including battery)
Battery: BT-990
Capacity: 600 mAh 3.6V
Talk Mode: 5 hours
Standby Mode: 14 Days

Specifications, Features and availability of Optional Accessories are all subject to change without prior notice.

WARRANTY

One-Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: Uniden Australia Pty Limited ACN 001 865 498
Uniden New Zealand Limited

ELEMENTS OF WARRANTY: Uniden warrants to the original retail owner for the duration of this warranty its DG 910 (here in after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is: (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as a part of a system not manufactured by Uniden.

PARTS COVERED: This warranty covers for one (1) year, the Base/Charging Unit and Handset only. All accessories (AC Adaptor, Wall Mount Bracket etc) are covered for 90 days only.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor, at its discretion, will repair the defect or replace the product and return it to you without charge for parts and service.

THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.

WARRANTY CARD: If a Warranty Card has been included with this Product, please complete and return to us within 14 days of purchase. Your name and the serial number of the Product will then be registered in our database and this will help us process your claim with greater speed and efficiency should you require warranty service.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:
In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (e.g. a copy of the sales docket) to the warrantor at:

UNIDEN AUSTRALIA PTY LIMITED
SERVICE DIVISION
345 Princes Highway, Rockdale,
NSW 2261
Ph: (02) 9599 3577 Fax: (02) 9599 3278
FREE CALL 1800 632 789

UNIDEN NEW ZEALAND LIMITED
SERVICE DEPARTMENT
150 Harris Road, East Tamaki,
Auckland
Ph: 0-9-273 8383 Fax: 0-9-274 0009
Toll Free: 0800 4 UNIDEN
4 864336

Customers in other States should ship or deliver the Product freight pre-paid to their nearest Uniden Authorised Repair Centre.(Contact Uniden for the nearest Warranty Agent to you)

Uniden®

A Clear Signal of What's Ahead.

UNIDEN ©1999 Uniden Australia Pty Limited ©1999 Uniden New Zealand Limited
All Rights Reserved.