

Uniden®

SD5000UPVR

DIGITAL RECEIVER

Set Top Box with USB Record Capabilities



OWNER'S MANUAL

Safety First

Please review the following safety precautions. If this is your first time to use a digital receiver, then read this manual before installing or using this receiver. If the receiver is not functioning properly, please contact your local distributor or system installer.



TO REDUCE THE RISK OF FIRE AND
ELECTRIC SHOCK, DO NOT EXPOSE
THIS UNIT TO RAIN OR MOISTURE.



Power cord protection

To avoid any malfunctions of the receiver, and to protect against electric shock, fire or personal injury, please observe the following.

Hold the plug firmly when connecting or disconnecting the AC power cord.

Keep the AC power cord away from heating appliances.

Never put any heavy object on the AC power cord.

Do not attempt to repair or reconstruct the AC power cord in any way.

Never make or change connections with the power switched on.

Placement

Avoid placing the receiver in areas of:

Direct sunlight, heating radiators, closed automobiles, high temperature (over 35°C), high humidity (over 90%) or severe dust as the internal parts may be seriously damaged.

Non-use periods

When the receiver is not being used, turn it off. When left unused for a long period of time, the receiver should be unplugged from the household AC outlet.

No fingers or other objects inside

Touching internal parts of the receiver is dangerous, and may cause serious damage to the unit.

Do not attempt to disassemble the receiver.

Do not put any foreign object in the receiver.

Keep away from water/magnet

Keep the receiver away from flower vases, tubs, sinks, etc. If liquids are spilled into the receiver, serious damage could occur.

Never bring a magnet or magnetized object near to the receiver.

Stacking

Place the receiver in a horizontal position and do not place anything heavy on it.

Condensation

Moisture may form on the remote control lens in the following conditions:

Immediately after a heater has been turned on in a steamy or very humid room.

When the receiver is suddenly moved from a cold environment to a warm one.

If moisture forms inside the receiver, it may not operate properly. In this case, turn on the power and wait about one hour for the moisture to evaporate.

• Trademark Information



DVB and the DVB logo are registered trademarks of the DVB project.

Table of Contents

Safety First	2
Introduction	6
<i>Package Contents</i>	6
<i>Key Features</i>	7
Parts of the Uniden SD5000UPVR	8
<i>Front panel</i>	8
<i>Rear panel</i>	8
Remote Control	9
System Installation	10
<i>Connecting to the TV</i>	10
<i>Connecting a HiFi system</i>	10
Aspect Ratio Setting	11
Switching on for the first time	12
Viewing Channels	13
<i>The Information Window</i>	15
Recording TV Programmes	16
<i>Format the USB Storage Drive</i>	16
<i>Start /Stop Recording</i>	18
<i>Approximate Recording Times</i>	18
Timeshift Function	19
<i>Start/Stop Timeshift</i>	19
Playback Recorded TV Content	20
<i>USB File Manager</i>	20

Main Menu	21
Channel Manager	21
<i>Setup</i>	25
<i>Auto Scan</i>	26
<i>Manual Scan</i>	27
<i>Area Scan</i>	28
Settings	29
<i>On Screen Display (OSD) Set up</i>	29
<i>TV Set up</i>	30
<i>System Setup</i>	31
<i>Time</i>	31
<i>Wakeup Timer</i>	32
<i>Parental Lock</i>	33
TOOLS	34
<i>Factory Reset</i>	34
<i>Version</i>	35
<i>Software Upgrade</i>	36
Playing Multimedia Content	37
<i>Movie Playing</i>	37
<i>Music Playing</i>	37
<i>Photo Playing</i>	38
Troubleshooting	39
Product Specification	41
One Year Limited Warranty	42

Introduction

The Uniden SD5000UPVR Set-Top-Box is an MPEG-2 compliant Digital receiver, capable of receiving and recording Standard Definition (SD) TV programmes from free-to-air terrestrial broadcasts (DVB-T).

The user friendly On-Screen-Display (OSD) allows you to set-up your receiver to enjoy SD digital channels with clear picture and stereo sound quality.

Package Contents

Unpack the receiver and verify that all of the following items are included.

- *SD5000UPVR SD Digital Terrestrial Receiver*
- *Remote Control Unit (with 2x AAA batteries)*
- *Owner's manual*
- *AC adapter (fixed to receiver)*
- *Composite (RCA) Video/Audio Cable*



NOTE

If any items are missing or damaged, contact your place of purchase immediately.

Key Features

- **USB Record/Playback*:**
Record or playback your favourite programmes from an external USB Storage Drive (not included)
- **Timeshift Function*:**
Pause a broadcast or record it and watch it later
- **On Screen Display (OSD):**
Easy to use Menu system displays key information on screen
- **Fully Functional Remote Control**
- **Electronic Programme Guide (EPG):**
With Now & Next and 7 days programme guide support
- **Video and audio connection capabilities:**
Component Video/Audio and Coaxial Digital Audio connections
- **DVB Compliant:**
Decodes MPEG-2 format
- **Video Resolution:**
720 x 576 (PAL), 720 x 480 (NTSC)
- **Multiple Aspect Ratio Modes:**
Auto, 16:9(Widescreen), 4:3LB(Letter Box) and 4:3PS(Pan Scan)
- **Channel Search with automatic/manual scan**
- **Parental Locked Function**
- **Wake Up Timer**
- **Media playback:**
Play multimedia files added separately to the USB Storage Drive
- **DVB Subtitling - ETSI 300 473 Compliant**
- **Teletext - VBI / OSD**
- **USB 2.0 support for software upgrade**




NOTE


** USB Record/Playback and Timeshift:
A USB Storage Drive of compatible read/write speed and sufficient space must be connected to enable these functions. Uniden recommends connecting a dedicated compatible storage drive to record, playback and timeshift TV programmes.*

Parts of the Uniden SD5000UPVR


Front panel

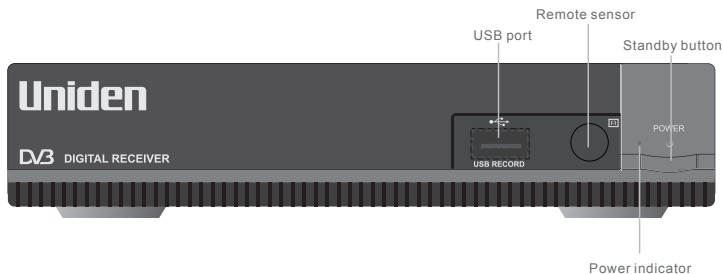

Rear panel

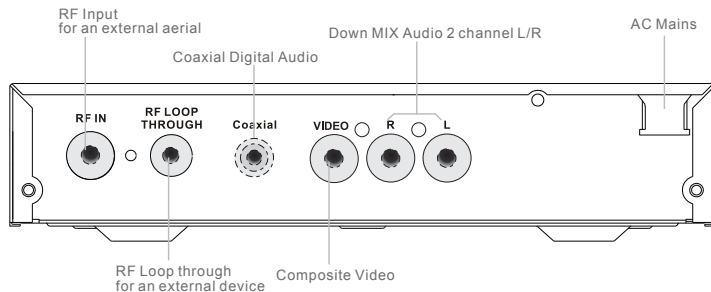

Remote Control

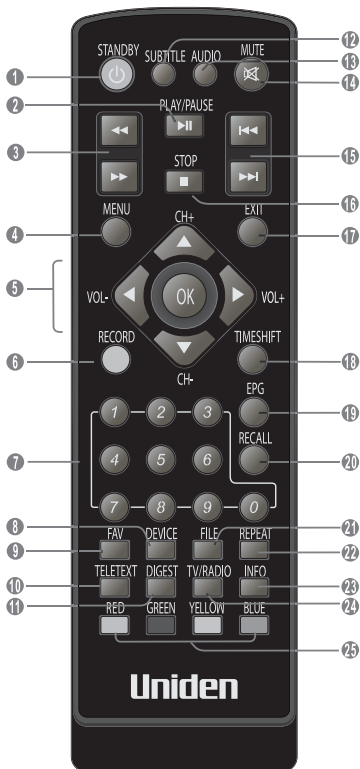

1. STANDBY:

Switch the receiver on/off(standby)

2. PAUSE/PLAY:

Play/Pause the video or audio in playback mode

3. ◀◀ / ▶▶:

Rewind / Forward during playback mode

4. MENU: Open/Close the Menu screen

5. CH+/CH-/VOL+/VOL-/OK:

Menu ▲▼◀▶ navigation buttons.

Channel Up/Down and Volume Up/Down.
OK - Confirm a selection within a menu.

6. RECORD:

Start Programme Record funtion

7. Numeric (0-9):

For entering channel number or PIN code

8. DEVICE:

View the USB Storage Drive's Read/Record/Timeshift compatibility

9. FAVORITE: Open the Favorites list

10. TELETXT: Switch Teletext ON/OFF

11. DIGEST:

View Channel thumbnails and preview the highlighted Channel.

12. SUBTITLE:

For DVB subtitles if available

13. AUDIO:

Select audio: Left/Right/Stereo/Mono

14. MUTE: Disable/enable MUTE

15. ◀◀ / ▶▶: Skip to previous/to next file (for multimedia files or photos)

16. STOP: Stop playback or recording

17. EXIT: Exit from the Menu

18. TIMESHIFT: Activate Timeshift function

19. EPG: Open up the Electronic Programme Guide (EPG) menu

20. RECALL: Toggle between the current and previous channels

21. FILE:

View filelist or Recorded programmes

22. REPEAT:

Funtion not available

23. INFO: Channel mode: view current channel information. Menu mode: view key guide

24. TV/RADIO:


Switch between TV and Radio mode

25. RED/GREEN/YELLOW/BLUE Buttons:


Perform various functions which are shown in the menu (Blue button: shortcut to Timer function)

System Installation

Connecting to the TV

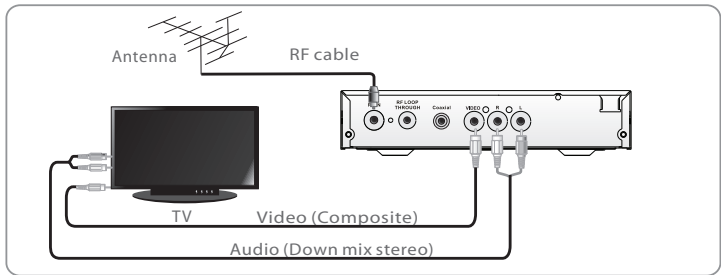

Connecting a HiFi system

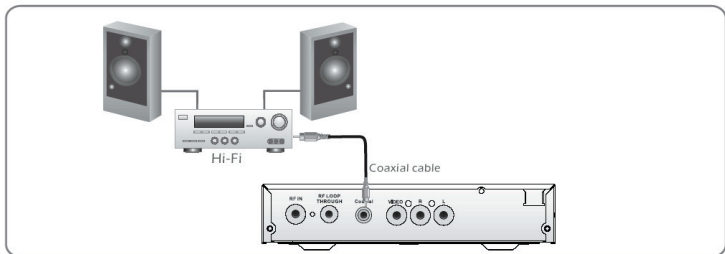

Aspect Ratio Setting

Digital TV broadcasts carry a mixture of TV programmes filmed in widescreen (16:9) and standard (4:3) formats.

The SD5000UPVR's Aspect Ratio setting is preset to **AUTO** to automatically detect the aspect ratio of the TV programme. You may change the aspect ratio (see Menu/DigitalTV/Settings/TV page 26) to one of the following options:

AUTO

16:9 - Widescreen

4:3 LB - Letter Box


4:3 PS - Pan Scan

Recognising that viewers may not always be satisfied with the broadcaster's recommended display format or choice of formats, TV sets may also have a 'viewer preference' setting, in which the viewer's wishes override that of the broadcaster, the viewer will have to select these other modes deliberately.

Switching on for the first time

Your SD5000UPVR needs to be tuned to channels in your region. When it is connected and switched on for the first time the SD5000UPVR will automatically start in Auto Scan mode.

1. Turn on your TV set and select the input (with the AV key, or similar, on the television remote control).
2. Turn on the SD5000UPVR by pressing the power key on the front panel or pressing **STANDBY** on the remote control. The power indicator on the front panel will light up green.
3. The SD5000UPVR will automatically begin Auto Scan to tune into local frequencies. The tuning status screen displays.

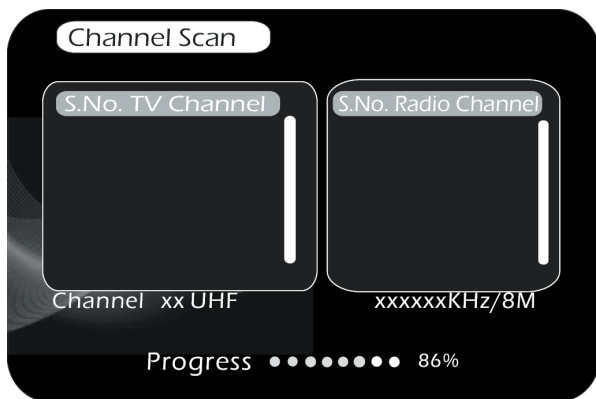

4. When tuning is finished Standard Definition (SD) Digital channels are then received.

HD channels may also be tuned, however the SD5000UPVR will not display these channels. You can delete HD channels from the channel list using the Channel Organiser menu - see page 21.

Viewing Channels

Changing the Channel

Use the Channel keys ▲▼ or enter the channel number on the remote control to change channels.



Only SD channels can be viewed. HD channels which may have been tuned during scan cannot be viewed. Use the Channel Organiser menu on page 21 to delete HD channels from the channel list.

 
Change Channel by Channel list

1. Press **OK** in channel mode to enter the “QUICK SELECT” window.
2. Press **UP** or **DOWN** to select desired channel then press **OK**.



Change Channel by Electronic Programme Guide (EPG)

1. Press **EPG** to open the “Electronic Programme Guide” window.
2. Select the desired channel and then press **OK**.

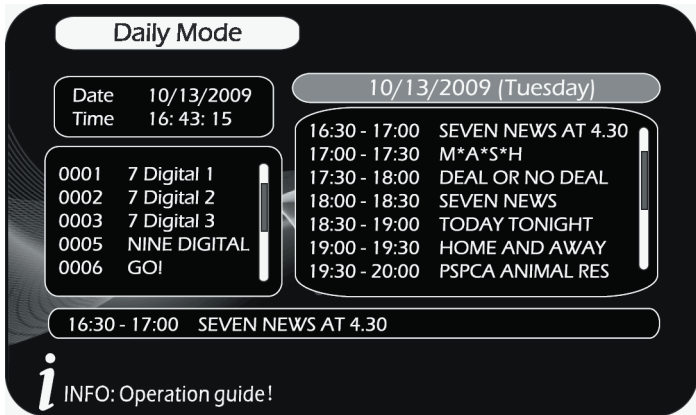


The Information Window

1. When viewing channels (Viewing Mode) press **INFO** to view the TV programme information where you can see the now and next programme information.



 2. Press **INFO** while the Now/Next window is showing to view the Broadcaster details.

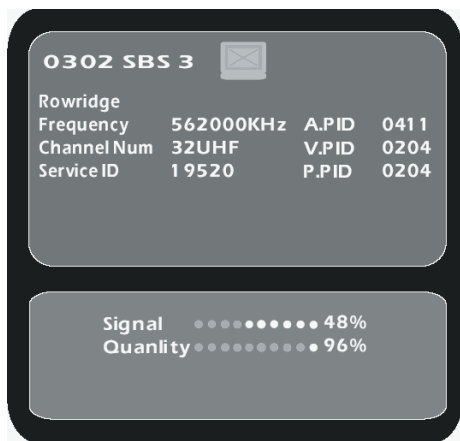

NOTE

In Menu mode pressing **INFO** opens the key guide

Recording TV Programmes

The SD5000UPVR can record television programmes onto a USB mass storage drive.

The storage drive read/write speed must meet the requirement speeds below for optimum performance.

Playback mode (read speed > 1Mbps)

Record mode (write speed > 8Mbps)

Time shift mode (write speed > 30Mbps)


To check if a USB storage drive is compatible connect it to the USB port and then press **DEVICE**. The storage drive read/recorder/timeshift compatibility will be indicated by the colour spot next to the device listing.



It is recommended you format the Storage Drive before use. The SD5000UPVR only supports FAT/FAT32 formatting of the USB Storage Drive.


Format the USB Storage Drive

1. Press **MENU** then select “Format USB Storage”.
2. Press the **OK** and then enter the PIN code (the default PIN code is 0000).

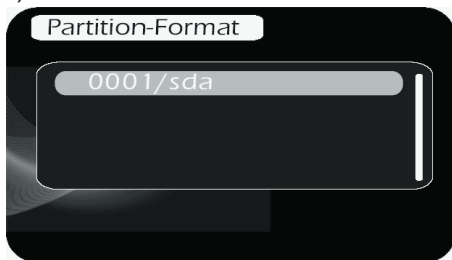

3. A window of the connected USB device path (e.g. 001/dev/sda/1) will appear. Press **OK**.

4. Select “YES” then press **OK** to format the Storage Drive.

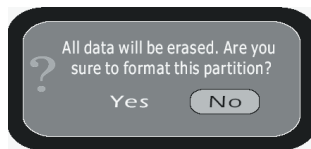

A partition (separate folder) will be created on the Storage Drive for recorded TV programmes.



NOTE

For long recording times a USB hard drive (instead of a USB flash drive) is recommended.

Caution:

- All the files saved in your USB Storage Drive will be erased when formatting.
- Do not disconnect the USB Storage Drive while formatting. It may cause damage to your USB Storage Drive.

Start /Stop Recording

In viewing mode:

1. Press **RECORD** to begin recording function.
2. Press **STOP** to stop recording function.

Approximate Recording Times

Recording Times	Capacity
30 minutes	650MB (0.65GB)
1 hour	1.3GB
2 hours	2.6GB
5 hours	6.5GB

Timeshift Function

The Timeshift function records a TV programme to a buffer (drive space on an external USB Storage Drive). Timeshift offers the ability for you to then pause, forward or rewind the TV programme before the it has completed broadcasting. At the end of Timeshift you can choose to save the recorded buffer for later viewing.


Start/Stop Timeshift

In viewing mode press **TIMESHIFT** to begin timeshift record.



During Timeshift, it is possible to perform the following actions:

1. Press **PLAY/PAUSE** to play/pause the playback
2. Press **▶▶** to fast forward the playback
3. Press **◀◀** to rewind the playback
4. Press **EXIT** to stop Timeshift. A confirmation window will appear asking if you wish to save the recorded buffer.
5. Select "Yes" to save the Timeshift buffer to the recorded programme or select "No" to delete the recorded buffer.

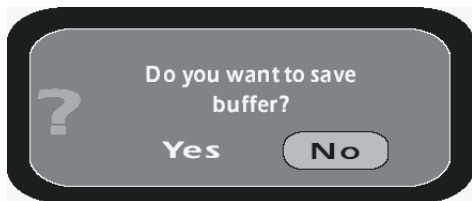


Playback Recorded TV Content

USB File Manager

TV Programmes you have recorded using normal Record or saved from the Timeshift buffer are stored on the USB Storage Drive.


1. Press **MENU** to enter the Main Menu.
2. Select “USB File Manager”. The USB File Manager window will display.
3. The files are available for “PLAY”. Press the Green colour button to change the select action between “PLAY”, “DEL” or “Rename”.
4. Select the desired files and then press **OK** to action.

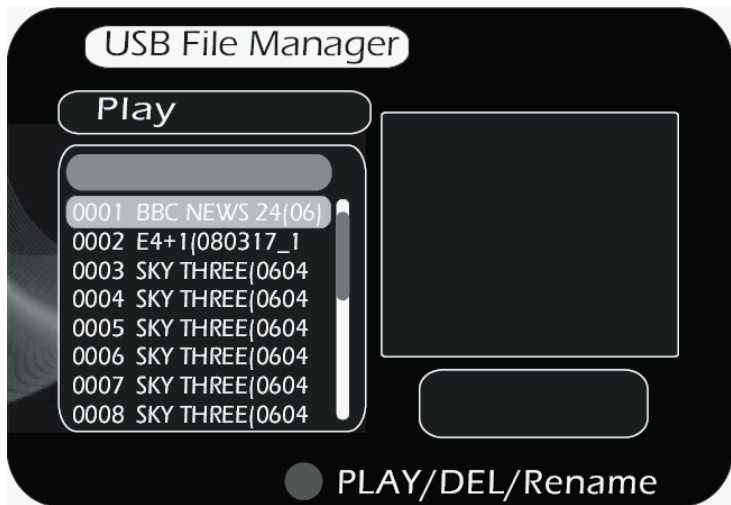

Main Menu

Press **MENU** to enter the Main Menu. Use **▲▼◀▶** to navigate to a selection and the press **OK** to select.

Press **INFO** to view a key guide for the displayed window.

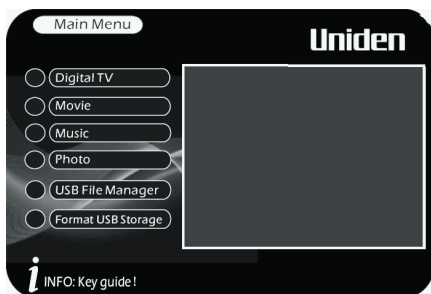

Channel Manager

Channel Organiser

Allows you to set a channel to the Favourites list or channel locked (Parental Lock) list.

 
1. Press **MENU** to enter Main Menu.
2. Press **OK** three times to enter “Channel Organizer”.
3. Select a channel and use the colour keys to organise the channel.



Channel Sorting

Use this window to sort the channel lists.

1. Press **MENU** to enter Main Menu.
2. Press **OK** twice to enter Channel Manager.
3. Select “Channel Sorting” and then press **OK** to enter the “Channel Sorting” window.
4. Use **▲▼◀▶** to select the sort filter and then press **OK**.
5. Enter the PIN code (default PIN code is 0000) to confirm.

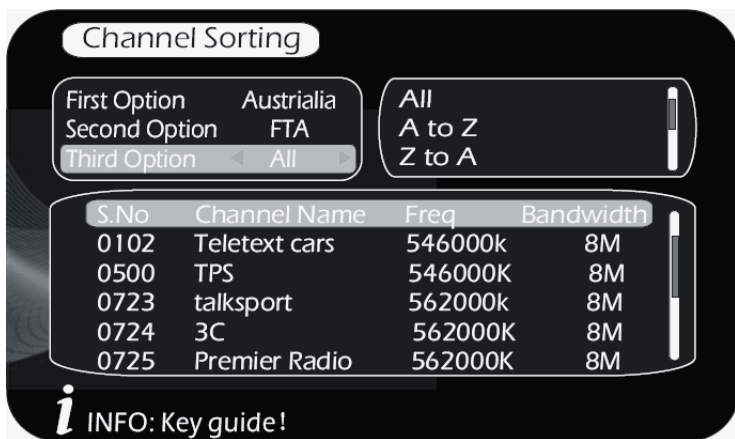

Channel Grouping

Use this window to tag channels into groups (e.g. News, Science, Sport, Movie, Kids, Music, Fashion).


1. Press **MENU** to enter Main Menu.
2. Press **OK** twice to enter Channel Manager.
3. Select “Channel Grouping” and press **OK** to select the “Channel Grouping”.
4. Select a channel and then press the numeric button to tag the channel into a group.



To use Channel Grouping press **OK** when in viewing mode to display the “Quick Select” list and then use ◀ or ▶ to change the group lists.

Delete All (Channels)



1. Press **MENU** to enter the Main Menu.
2. Press **OK** twice to select “Channel Manager”.
3. Select “All TV Channels” or “All Radio Channels” and then press **OK**.
4. Enter the PIN code (default 0000) to confirm.

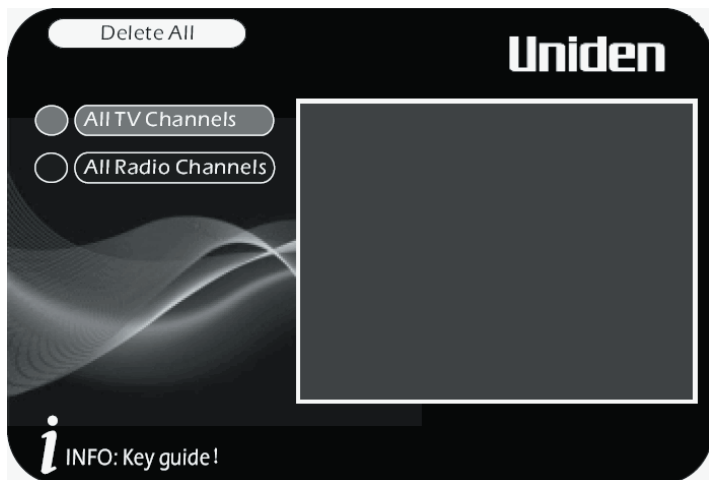

Setup

Use the Setup menu to scan for local channels.

  
1. Press **MENU** to enter “Main Menu”.
2. Press **OK** to highlight “Digital TV”.
3. Select “Setup” and then press **OK** to confirm.

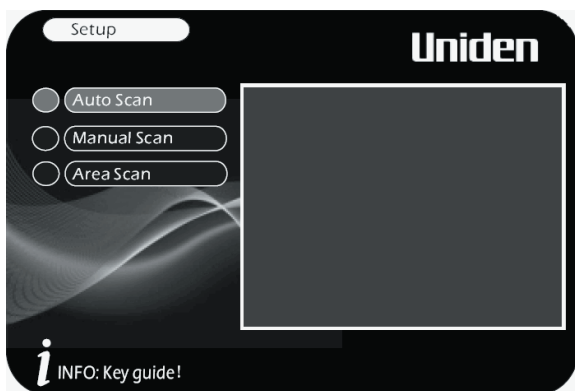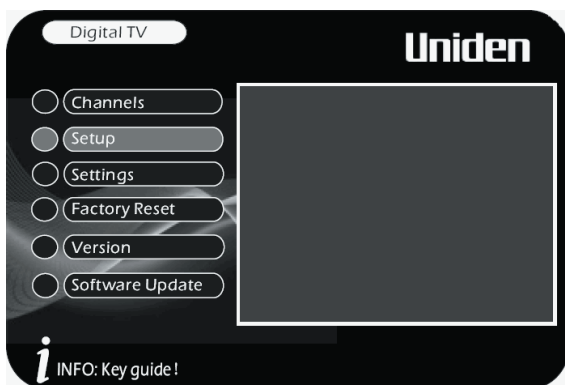

Auto Scan

Use Auto Scan to automatically scan for local channels.

 
1. Press **MENU** to enter the Main Menu.
2. Press **OK** and select “Setup”.
3. Press **OK** and select “Auto Scan”
4. Auto Scan will begin immediately.

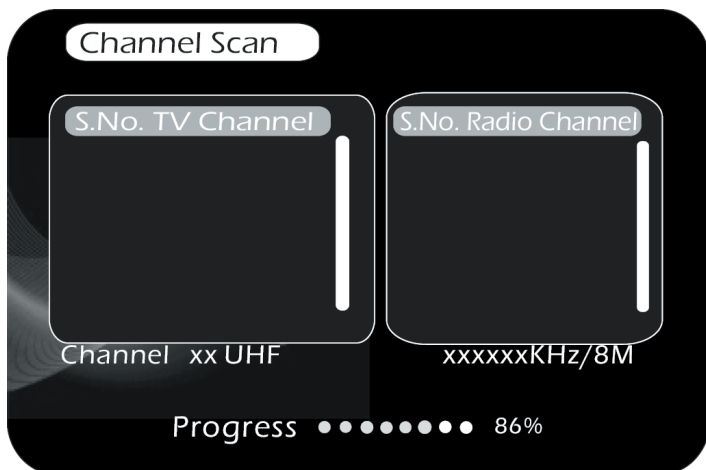

Manual Scan

Use Manual Scan to scan for individual channels.


1. Select “Manual Scan” and then press **OK**.
2. Press ◀ or ▶ to select the Channel Number to scan for.
3. Press **OK** to begin scan.
4. Press **OK** to begin scan.

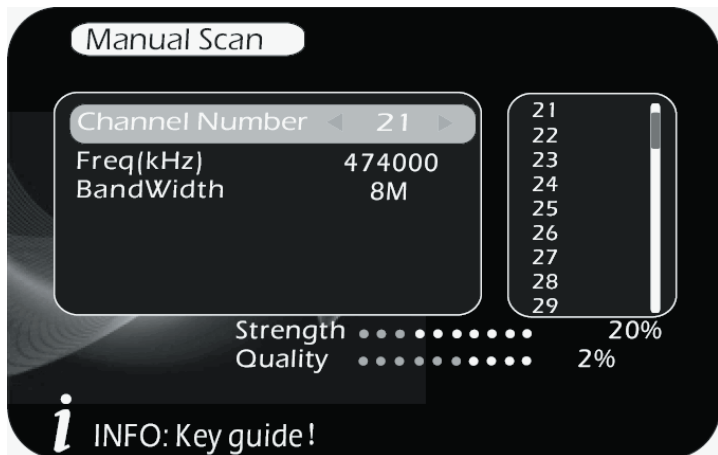

Area Scan

Use Area Scan if you know the frequency or frequency range of local channels.

 1. Press **MENU** to enter the Main Menu.
2. Press **OK** and select “Setup”.
3. Press **OK** and select “Area Scan”
4. Use the numeric buttons to enter the “Start Freq(kHz)”
5. Enter the “End Freq(kHz)” if available.
6. Select the “BandWidth”.
7. Area Scan will begin immediately.

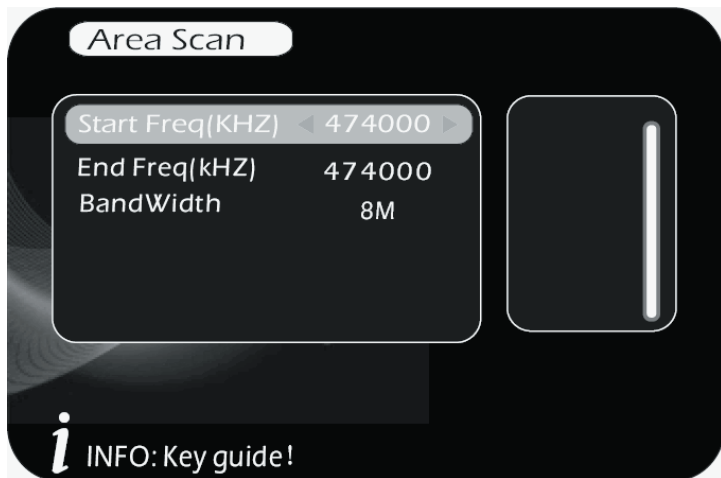

Settings


Many aspects of your SD5000UPVR can be set to reflect your circumstances and preference. The Settings menu screen is accessed from Main Menu. The Settings contains On Screen Display (OSD), TV, System Setup, Time, Wakeup Timer, Parental Lock. Setting changes will be effective after you EXIT the Main Menu.

On Screen Display (OSD) Set up

This menu allows to set the OSD information based on the viewer preference.

1. Enter the "On Screen Display" OSD menu from the Settings menu.
2. Select the desired option.
2. Press ◀ or ▶ to select the desired setting for each option.
3. Press **OK** to set.


NOTE: When the "Time on OSD" is on, the subtitle function is automatic off.

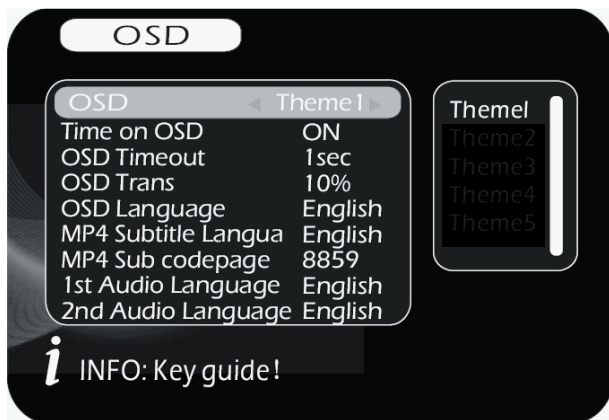

TV Set up

Use the TV Set up menu to change the TV picture settings.


1. Enter the “TV” menu from the Settings menu.
2. Select the desired option.
3. Press ◀ or ▶ to select the desired setting for each option.
4. Press **OK** to set.

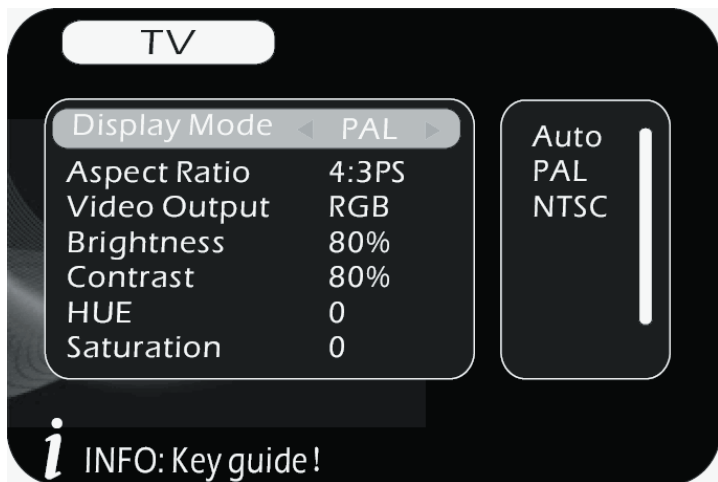

System Setup

Use the System Setup menu to change system settings.


1. Enter the “System Setup” menu from the Settings menu.
2. Select the desired option.
3. Press ◀ or ▶ to select the desired setting for each option.
4. Press **OK** to set.

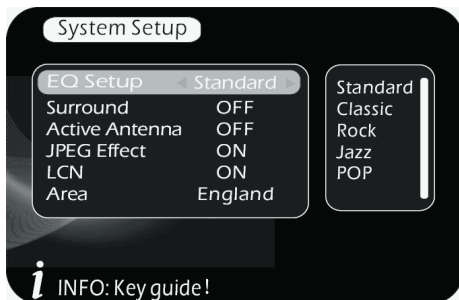

Time

Use the Time menu to change date & time settings.

1. Enter the “Time” menu from the Settings menu.
2. Select the desired option.
3. Press ◀ or ▶ to select the desired setting for each option.
4. Press **OK** to set.

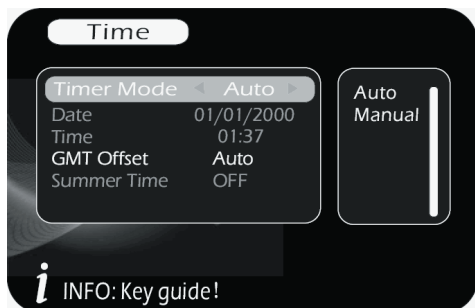

Wakeup Timer

Use the Wakeup Timer menu to set the SD5000UPVR to record TV programmes on a timer basis. You can schedule up to 7 wakeup timers. There are 3 ways to enter the Wakeup Timer menu.

Entering through the main menu:

 
1. Enter the “Wakeup Timer” menu from the Settings menu.
2. Press ◀ or ▶ to select the desired setting for each option.
3. Press **OK** to set.

Entering through the EPG:

1. Press **EPG** to enter the EPG window.
2. Press ◀ or ▶ to enter an event.
3. Press ▲ or ▼ to select the event.
4. Press Blue colour button to enter the “Wakeup Timer” menu.

Entering through the BLUE button:

Press the Blue colour button to enter the Wakeup Timer menu directly.

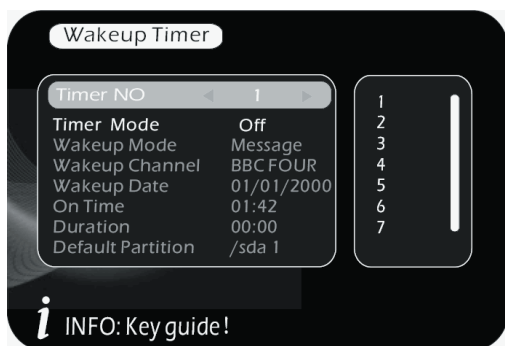


NOTE

EXIT all menus and the system will save your setup.

Parental Lock

Use this window to set the PIN code for secure access menus and parental lock channels (see Channel Organiser - page 21).

1. Enter the “Parental Lock” menu from the Settings menu.
2. Use the numeric buttons to enter the Old PIN code, New PIN code and confirm the New PIN code.
3. Press **OK** to set.

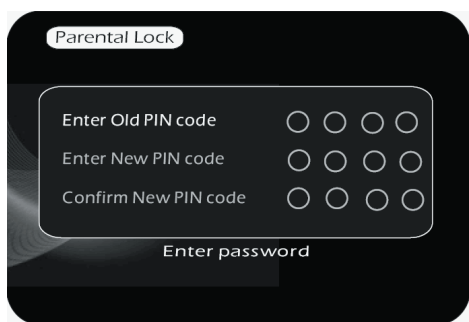

The default password is 0000.



NOTE

TOOLS

Factory Reset

You can re-set the SD5000UPVR back to factory settings and clear all existed channels.


1. Enter “Factory Reset” from the “Digital TV” menu.
2. Enter the PIN code to proceed (default PIN code is 0000).
3. A confirmation window is displayed. Select “Yes” and then press **OK** to return back to factory settings and clear all channels. Select “No” and press **OK** to cancel the reset.
4. Press **EXIT** to exit.

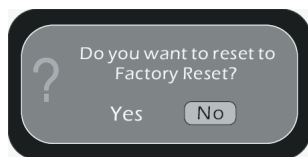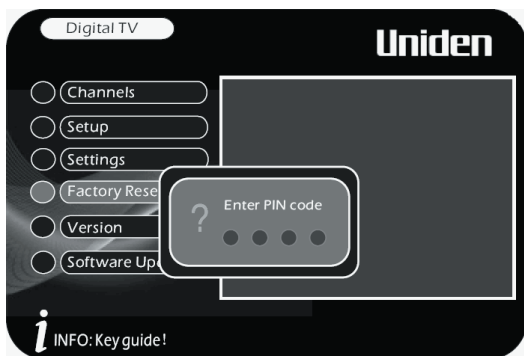

Version

The Version menu displays the version details for the SD5000UPVR.

 1. Enter the “Version” menu from the “Digital TV” menu.

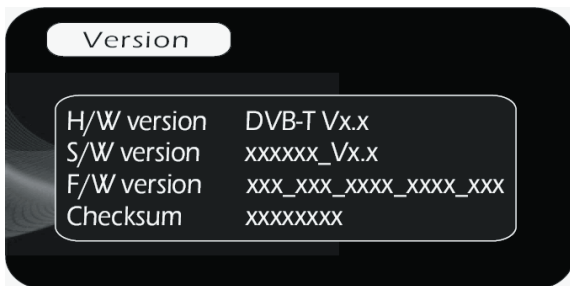


Software Upgrade

The software for the SD5000UPVR may be upgraded in future. Visit the website www.uniden.com.au for the latest information.

- Copy the software file to the root folder of a USB Storage Drive and connect to the SD5000UPVR.

1. Press **MENU** to enter the “Main Menu”.
2. Press **OK** to select “Digital TV”.
3. Select “Software Upgrade”.
4. Press **OK** to select “Download from USB” and then select the upgrade file.
5. Press **OK** to upgrade.
6. Enter the PIN code if required.

You can save and retrieve your (organised, sorted...) channel data using the “Download Channel Data” and “Update Channel Data” options in the update menu.

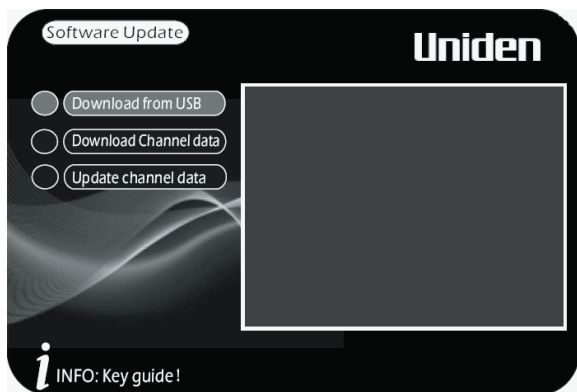


Playing Multimedia Content

You can play multimedia content that is stored on the USB Storage Drive. This function allows you to play video (XVID, MPEG I/II, DivX 4/5), audio (MP3, WMA) or photo (JPEG) file formats).

Movie Playing

1. Press **MENU** to enter Main Menu.
2. Select "Movie".
3. Move the cursor to enter the route of the desired video files.
4. Press **OK** to play the desired video files.

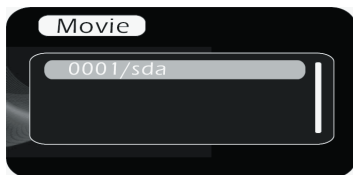

Music Playing

1. Press **MENU** to enter Main Menu.
2. Select "Music".
3. Move the cursor to enter the route of the desired video files.
4. Press **OK** to play the desired video files.


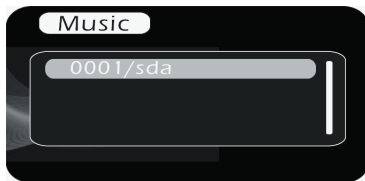


Photo Playing

1. Press **MENU** to enter the Main Menu.
2. Select Photo.
3. Move the cursor to enter the route of the desired photo files.
4. Press **OK** to view the photo.
5. Press **OK** to start slideshow.

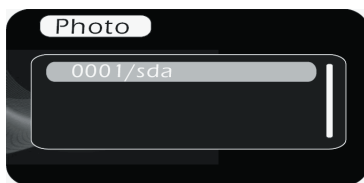

Press the RED colour button once, and then press **OK** repeatedly to zoom the photo at 2,3,4,1/2,1/3,1/4 levels.

Troubleshooting

In some region, the digital terrestrial signal may be weak. So you'd better use the antenna in which the booster was built, for watching the weak signal channels.

Problem	Possible cause	What to do
Standby light not lit	Mains lead unplugged Mains fuse blown	Check mains lead Check fuse
No signal found	Aerial is disconnected Aerial is damaged/mis-aligned Out of digital signal area	Check aerial lead Check aerial Check with dealer
No picture or sound	Tuned to digital teletext channel	Reduce to another channel
Scrambled channel message	Channel is scrambled	Select alternative channel
No response to remote control	Receiver off Remote not aimed correctly Front panel obstructed Remote batteries exhausted	Plug in receiver and turn on Aim remote at front panel Check for obstructions Replace remote batteries
No response to remote control	Receiver off Remote not aimed correctly Front panel obstructed Remote batteries exhausted	Plug in receiver and turn on Aim remote at front panel Check for obstructions Replace remote batteries

Problem	Possible cause	What to do
Forgotten channel lock code		Re-install channels to cancel channel lock
Forgotten menu lock code		Contact help line
The remote control will not operate your STB	(1) The batteries in your remote control need replacing (2) There is an obstruction blocking the signal path between the remote control and the box.	(1) Replace the batteries (2) Check that there is nothing in the way of the path between the remote control and the receiver
After moving the STB to another room you find you are no longer able to receive digital reception	The aerial feed former new point may come through a distribution system which may reduce the digital signal now received by the box.	Try a direct feed from the antenna
"HD TV is not available" appears	The current Channel is not an SD channel but is an HD channel which cannot be decoded.	Change to an SD channel. Delete the HD channel from the channel list - see Channel Organiser menu on page 21.
"USB storage speed is low. TIME SHIFT anyway?" appears	Your storage drive has a low read/write speed which is not suitable for Time shift or recording.	Connect a storage drive with compatible read/write speed. See Recording TV Programs - page 16 on how to check for a compatible storage drive.

Product Specification

Tuner & Channel	<ul style="list-style-type: none"> • RF Input Connector x1 (IEC-TYPE, IEC169-2, Female) • RF Output Cconnector x1 (IEC-Type, IEC169-2, Male (Loop through)) • Frequency Range: 174MHz~230MHz (VHF) & 470MHz ~862MHz (UHF) • Signal Level: -15 ~ -70 dbm
Decoder <ul style="list-style-type: none"> • Transport Stream • Profile Level • Input Rate • Video Formats • Audio Formats 	MPEG-2 ISO/IEC 13818 MPEG-2 MAIN PROFILE @MAIN LEVEL MAX. 15Mbit/s AUTO, 4:3PS, 4:3LB, 16:9 Switchable MPEG Layer I & II, 32 / 44.1 / 48KHz Dobly AC-3(Digital out)
Connection <ul style="list-style-type: none"> • Main Power Cable • Tuner • RCA • Coaxial • Data Port 	Fixed Type RF Input x1, RF Loop Through x1 VIDEO + R + L x1 Coaxial x1 USB 2.0 x1
Power Supply <ul style="list-style-type: none"> • Input Voltage • Power Consumption 	AC220-240V ~ 50/60Hz MAX. 10W

Design and Specifications are subject to change without notice.

One Year Limited Warranty

ONE YEAR LIMITED WARRANTY

UNIDEN SD5000UPVR SET TOP BOX

IMPORTANT: Evidence of original purchase is required for warranty service.

WARRANTOR: Uniden Australia Pty Limited A.B.N. 58 001 865 498
Uniden New Zealand Limited
Warranty only available in original country of purchase.

ELEMENT OF WARRANTY:

Uniden warrants to the original retail owner for the duration of this warranty, its UNIDEN SD5000UPVR SET TOP BOX (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION:

This warranty to the original retail owner only, shall terminate and be of no further effect ONE (1) year after the date of original retail sale.

This warranty will be deemed invalid if the Product is;

- (A) Damaged or not maintained as reasonable and necessary,
- (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden,
- (C) Improperly installed,
- (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty,
- (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, or
- (F) Where the Serial Number label of the product has been removed or damaged beyond recognition.

Warranty only valid in the country of original retail/sale.

PARTS COVERED:

This warranty covers for one (1) year, the Product and included accessories.

STATEMENT OF REMEDY:

In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion will repair the defect or replace the Product and return it to you without charge for parts or service. This warranty does not provide for reimbursement or payment of incidental or consequential damages.

This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).

PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY:

In the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (e.g. a copy of the sales docket), to the warrantor at:

**UNIDEN AUSTRALIA PTY LIMITED
SERVICE DIVISION**

345 Princes Highway, Rockdale
NSW 2216
Fx(02) 9599 3278
www.uniden.com.au

**UNIDEN NEW ZEALAND LIMITED
SERVICE DIVISION**

150 Harris Road, East Tamaki,
Manukau 2013
Fx(09) 274 4253
www.uniden.co.nz

Customers in other States should ship or deliver the Product freight pre-paid to their nearest Uniden Authorized Repair Centre (Contact Uniden for the nearest Warranty Agent to you).

Uniden®

© 2009 Uniden Australia Pty. Limited.
Uniden New Zealand Limited. Printed in PRC.