

Start Here! **1** **2** **3**

Quick Start Guide Next Page...



Quick Start Guide

XS 916

900 MHz
Caller ID
Dual Handset
10 Number
Memory
Plus
Rocketdial

Uniden

INSTALLATION & SAFETY

Choosing the best location for your phone.


When choosing a location for your phone there are a number of appliances the phone should not be near, and areas you should avoid.



This symbol indicates important operating and servicing instructions.



The earcap of this telephone may attract and retain small metallic objects.

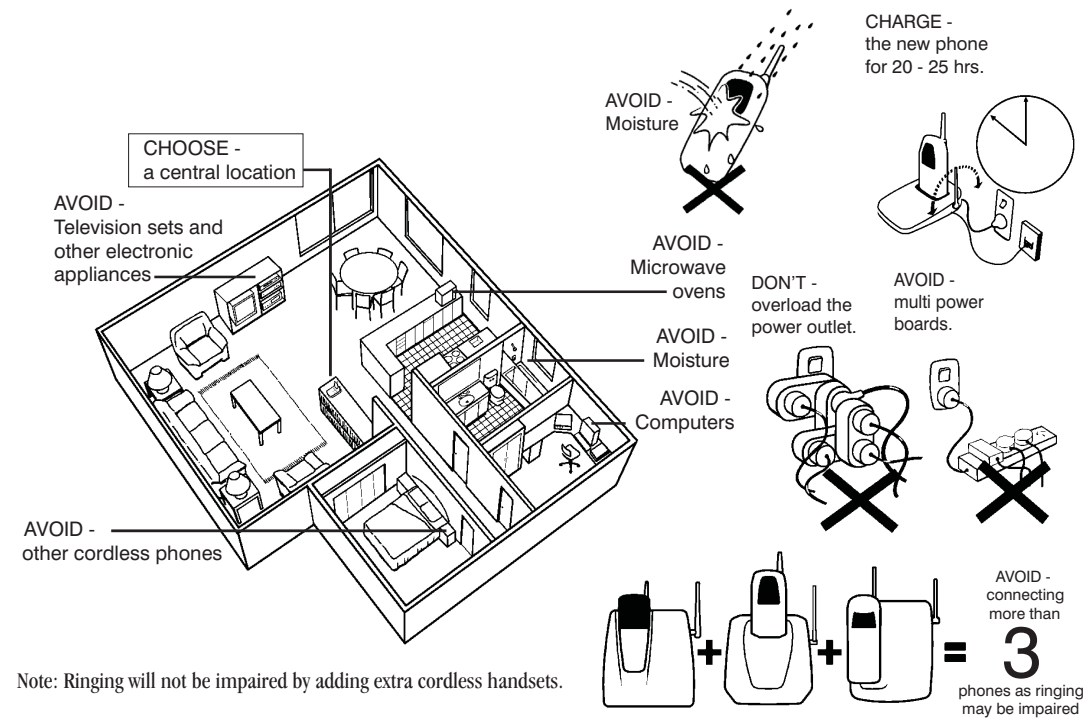


Start Here! **1** **2** **3**

Quick Start Guide Next Page...


1 Installing the Base Unit

- Plug the telephone cord into the Base Unit, then into the telephone socket on the wall.
- Plug the AC Adaptor cord into the Base Unit, then the AC Adaptor into the wall power point.
- Press the AC Adaptor cord into the curved recess under the Base Unit.

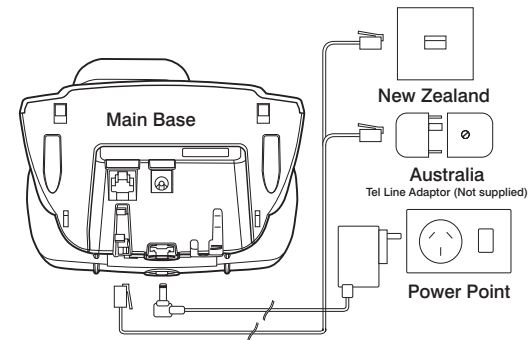


Installing the Charge Cradle

- Plug the AC Adaptor cord into the Charge Cradle, then the AC Adaptor into the wall power point.

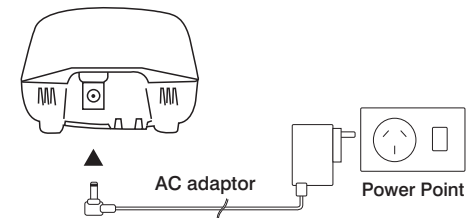


2 Installing the Handset Battery

- Press the battery cover and slide it off.

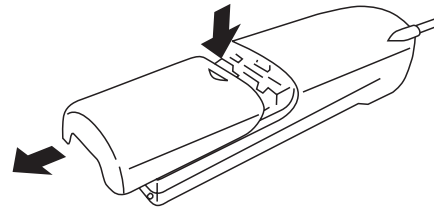


- Connect the battery plug to the socket at the rear of the battery compartment.
Make sure the plug is the right way round.
 The RED and BLACK battery wires must match the RED and BLACK printed on the phone case for the plug to fit properly. Press firmly until it clicks into place.

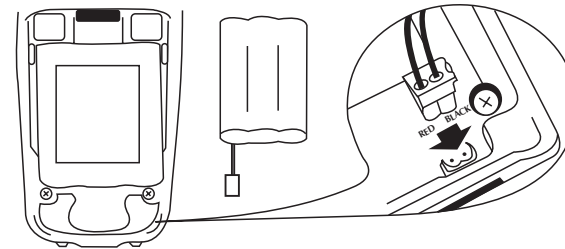

- Position the battery in the compartment and slide the cover into place.

Repeat process for second handset

- Place one handset on the main base and place the other handset in the extra charging cradle. It does not matter which handset is placed on the main base and extra charging cradle.

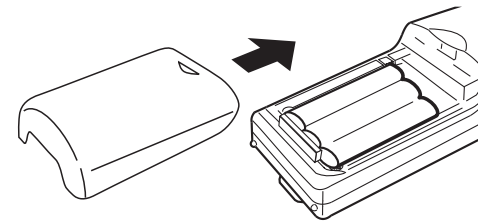

Charging the handset

- Charge the handsets uninterrupted for 20-25 hours each.



If the transferred call is not picked up after 5 minutes, the call will be disconnected.

3 Making a Call

After fully charging the handsets, remove the handset from the extra charging cradle and place it on the main base. (The **status** LED will begin to flash indicating registration is occurring).

Wait for at least 5 seconds before removing the extra handset from the **main** base.

The registration has been completed, and your dual handset cordless phone is ready for use.

- Pick up the handset and press **(talk)**. Dial the phone number
OR
Dial the phone number - then press **(talk)**
- To hang up - press **(end)**
OR
Place the handset on the Base Unit.

Call Transfers

TO TRANSFER CALLS

To transfer your call from handset 1 to handset 2:

- Press **(transfer)**.
- The call is placed on hold on the first handset, while handset 2 begins to ring.
The call is transferred when the 2nd handset is answered.
- Repeat the process to transfer the call back to handset 1. Calls can be transferred from either handset.














Answering a Call





- Handset on the Base Unit:
Remove the handset from the base and speak (*Auto Talk*).
- Handset off the Base Unit:
Pick up the handset, press **(talk)** and speak.
- To hang up - press **(end)**
OR
Place the handset on the Base Unit.

CONTENTS

Installation & Safety	i
Quick Start Guide	
Installing the Base Unit	ii
Installing the Handset Battery	iii
Making a Call	iv
Answering a Call	iv
Call Transfers	iv
Contents	v
Getting Started	
Controls and Functions	1
Uniden Company Philosophy	2
Welcome/Features	2
Included in your Package	3
Mounting the Base Unit on a wall	4
Battery Maintenance	5
Installing the Beltclip	5
Headset Installation	5
Using your Phone	
Setting Menu Options	6
Auto Talk	6
Pop Up Name	6
Making and Receiving Calls	7
Adjusting the Handset Ringer Volume and Earpiece Volume	8
Redial	8
Travelling Out-of-Range	8
Selecting a different channel	9
Find Handset	9
Call Waiting/Flash	9
Memory Dialing	
Storing Phone Numbers and Names	10
Making Calls with Memory Dialing	11
Memory Dialing from Talk Mode	11
Chain Dialing	11
Editing a Stored Name and/or Phone Number	12
Erasing a Stored Name and/or Phone Number	12
Call Transfer	13
Rocketdial	
Rocketdial	14
Storing and Editing the Rocketdial	14
Making Calls with Rocketdial	14
Deleting the Rocketdial	14
Caller ID	
Caller ID	15
When the Telephone Rings	15
Viewing the Caller ID Message List	16
Deleting Information from the Caller ID List	16
Deleting a Caller ID Message	16
Deleting all Caller ID Names and Numbers	16
Calling a Party from the Caller ID List	17
Dial Edit	17
Storing Caller ID messages in Memory Dialing	17
Troubleshooting	18
Memo	19
Warranty	21

 CONTROLS AND FUNCTIONS

1. Handset antenna
2. Handset earpiece
3. LCD display
4.  key
5.  /flash key
6.  /< cursor key
7.  /pause key
8.  /channel key
9. Handset microphone and ringer speaker
10.  Volume up key
11.  key
12.  key
13.  Volume down key
14.  /> key
15.  key
16.  /delete key
17. Handset charging contacts
18. Status light
19.  handset key
20. Base charging contacts
21. Telephone line jack
22. AC adaptor input

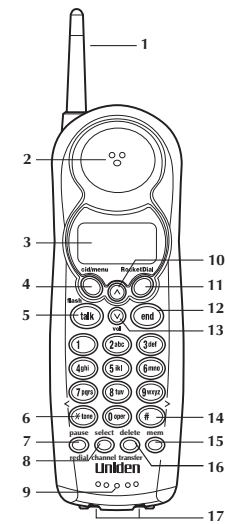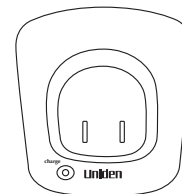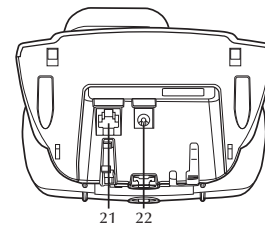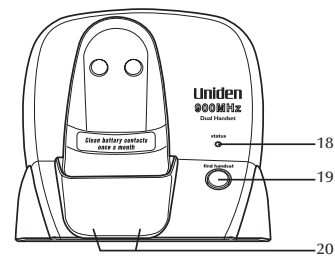

UNIDEN COMPANY PHILOSOPHY

To bring outstanding wireless communication products to people's lives throughout the world.

WELCOME

Congratulations on your purchase of this Uniden cordless telephone. This is designed for reliability, long life and outstanding performance utilising the latest in 900MHz Technology.

FEATURES

- Multiple Handsets (up to 2))
- 900MHz SCR Technology (Sound Clarity and Range)
- Caller ID Display*
- Pop Up Name - Caller Name Identification #
- 30 Caller ID Memories
- Alphanumeric Memory Dialing
- Super Chat Battery - 9 Hours Talk Time
- Maxi-Sound - Extra Loud Handset Volume Control
- Rocketdial - One Touch VIP Dial
- 12 Days Standby Time
- LCD Back Light
- Wall or Desk Mountable
- Page/Find Handset Feature
- AutoTalk
- 32 Digit Redial
- Pause
- Flash Button
- 2 Type Tone Ringer
- 3 Step Ringer Volume Control

NOTES


* Caller ID feature only works if you subscribe to the service by your local telephone company. There is usually a fee for this service.

Pop Up Name feature only works if you subscribe to your telephone company Caller ID service and record names into your phones memory.


INCLUDED IN YOUR PACKAGE

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact the Uniden Parts Department.


**Super Chat
Rechargeable Battery**

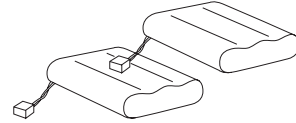


AC Adaptor

 


Telephone Cord

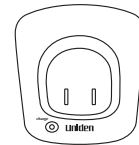

Charge Cradle

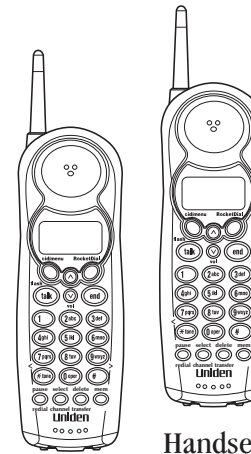


Handset

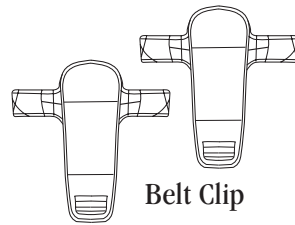

Belt Clip



Owners Manual

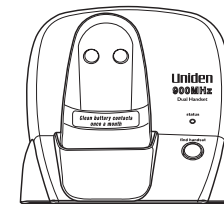

Base Unit


MOUNTING THE BASE UNIT ON A WALL

Direct wall mounting

You can mount your phone directly to the wall. Before doing this, consider the following:

- Avoid electrical cables, pipes or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- Mount your phone within distance of a working phone jack.
- Make sure the wall material is capable of supporting the weight of the base and handset.
- Use screws with anchoring devices suitable for the wall material where the base unit will be placed.

1. Insert two mounting screws into a wall (with their appropriate anchoring device), 10cm apart. Allow about 3mm between the wall and screw heads for mounting the phone.
2. Plug the AC adaptor into the Base Unit and then into a power point.
3. Plug the telephone cord into the Base Unit and then into the telephone socket on the wall.
4. Align the mounting slots on the base with the mounting posts on the wall. Then push in and down until the phone is firmly seated.

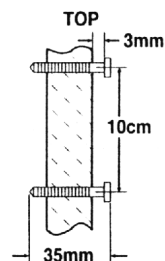



Use only the genuine Uniden Super Chat Battery supplied with your phone. Replacement Super Chat Batteries are available through the Uniden Parts Department.



If you are using an optional headset, you must still use the handset keypad for phone operations.

BATTERY MAINTENANCE

Battery use time (per charge)

- 9 hours continuous use
- 12 days when handset is in the standby mode.

When the Battery charge becomes low

If the phone is not in use, the 'Low Battery' flashes and none of the keys will operate. If the phone is in use, the 'Low Battery' flashes and the handset beeps. Complete your conversation as quickly as possible and return the handset to the base unit for charging.

- You cannot overcharge the battery.
- You may return the handset to the charger after each call or when the battery is low.

Cleaning the charging contacts

To maintain a good charge, it is important to clean the charging contacts on the handset base unit and additional charge cradle with a dry cloth or a pencil eraser about once a month. Do not use any liquids or solvents.

INSTALLING THE BELTCLIP

To attach the beltclip:


Insert the beltclip into the holes on each side of the handset. Press down until it clicks.

To remove the beltclip:

Pull both sides of the beltclip to release the tabs from the holes.

HEADSET INSTALLATION

Your phone may be used with an optional headset. To use this feature, simply plug the headset into the headset jack.

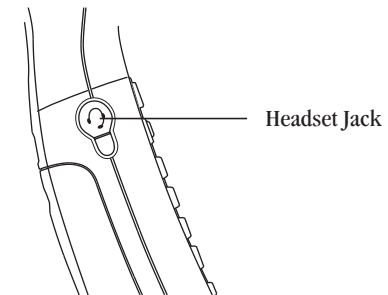



Functions will need to be programmed in both handsets separately.

SETTING MENU OPTIONS

Options available include AutoTalk and Pop Up Name.

AUTOTALK

 
AutoTalk allows you to answer the phone without pressing the **(talk)** button. If the phone rings when Autotalk is on, simply remove the handset from the base and the phone automatically answers the call. If the phone rings when Autotalk is off, you must press **(talk)** to answer the call.

POP UP NAME

If the displayed Caller ID telephone number is **exactly** the same as a number stored in memory, then the stored name will also be displayed with the caller ID telephone number.

To change your AutoTalk and Pop Up Name (Name Tag)

1. Press and hold **(cid/menu)**. The following screen appears.



2. Use **(^)** and **(v)** or a number key **(1)** and **(2)** to move the pointer to the selection that you would like to change. Press **(select)** to toggle between 'On' and 'Off' for AutoTalk and Pop Up Name (Name Tag).
3. Press **(end)** and return the handset to the base unit. The handset returns to the standby mode.



Refer to page 6 "Setting Menu Options" to turn on the Autotalk feature if desired.

MAKING AND RECEIVING CALLS

	Handset On Base	Handset Off Base/Charger
To answer a call	Pick up the handset (<i>Autotalk on</i>) or pick up the handset and press (talk) .	Press (talk) , any number, (*) or (#) (<i>Autotalk on</i>).
To make a call	<ol style="list-style-type: none"> 1. Pick up the handset. 2. Press (talk). 3. Listen for the dial tone. 4. Dial the number. <p style="text-align: center;">OR</p> <ol style="list-style-type: none"> 1. Pick up the handset. 2. Dial the number, then press (talk). 	<ol style="list-style-type: none"> 1. Press (talk). 2. Listen for dial tone. 3. Dial the number. <p style="text-align: center;">OR</p> <p>Dial the number then press (talk).</p>
To hang up	Press (end) , or return the handset to the base (<i>AutoStandby</i>).	Press (end) , or return the handset to the base (<i>AutoStandby</i>).
To redial	<ol style="list-style-type: none"> 1. Pick up the handset. 2. Press (talk). 3. Listen for the dial tone. 4. Press (redial). <p style="text-align: center;">OR</p> <ol style="list-style-type: none"> 1. Pick up the handset. 2. Press (redial), then press (talk). 	<ol style="list-style-type: none"> 1. Press (talk). 2. Listen for the dial tone. 3. Press (redial). <p style="text-align: center;">OR</p> <p>Press (redial), then press (talk).</p>



The transfer ring tone and volume can not be adjusted.



Settings will need to be programmed in both handsets separately.

ADJUSTING THE HANDSET RINGER VOLUME AND EARPIECE VOLUME

Handset ringer tone and volume

Press **▲** or **▼** in standby mode to select one of five ringer tones and volume combinations. The telephone will keep this setting for all future calls.


Earpiece Volume

Pressing **▲** or **▼** during a call will change the earpiece volume of the handset. The telephone will keep this setting for all future calls.

Volume Maximum Volume High Volume Medium Volume Low

Ringer Mute

You can temporarily mute the ringer tone. When the handset is off the base and the phone is ringing, press **end**. The ringer tone will return to normal with the next incoming call.

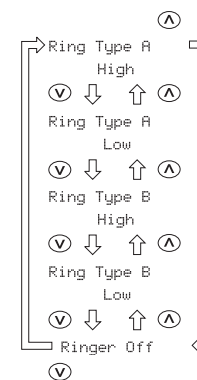

REDIAL

The **(redial)** key redials the last number dialed. The redialed number can be up to 32 digits long.

1. Press **(talk)**.
2. Press **(redial)**. The last number dialed will be called.

or

Press **(redial)**, then **(talk)**. The last number dialed will be called.

TRAVELLING OUT-OF-RANGE

During a call, noise will increase if you move your handset too far from your base unit. If the range limit of your base unit is exceeded, your call will terminate within five minutes.



You must subscribe through your local telephone company to receive Call Waiting services.

SELECTING A DIFFERENT CHANNEL


If you encounter interference while using your phone, you can manually change the phone's channel for clear operation. This function works only when the phone is in use. Press **(select)/channel**. 'Scanning' appears on the display, indicating the phone is changing to another channel.

FIND HANDSET

To locate a handset/s (while it's off the base), press **(find)** on the base. The handset/s beeps for 60 seconds.

Both handsets will ring when paged. Paging is cancelled by pressing any key on either handset.

If **(find)** is pressed while the handset is on the base, press **(find)** again to cancel paging.

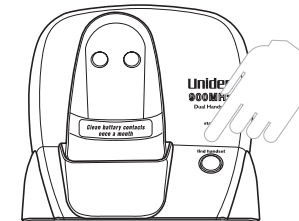


CALL WAITING/FLASH

If the call waiting tone sounds during a call:

AUSTRALIA: Press **(talk)/flash**, then **(2)** to switch between callers.

NEW ZEALAND: Press **(talk)/flash** to switch between callers.

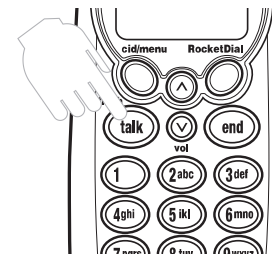



In memory dialling operation, you must press a key within 30 seconds or the phone will return to standby.



The pause feature is useful for long distance calling, credit card dialling or sequences of numbers that require a pause between digits.

STORING PHONE NUMBERS AND NAMES

Memory Dialling allows you to dial a number using just a few key presses. Your XS916 stores up to 10 names/numbers in each handset.

1. Press and hold **(mem)**, 'Memory Store' is displayed.
2. Press **(^)** or **(v)** or enter a number (**(0)** - **(9)**) to select the memory location where you would like to store the number.
3. Press **(select)**, 'Store Name' is displayed on the screen and a cursor flashes indicating that the display is ready for a name to be entered.

If the screen shown to the right appears, the selected memory location is already stored. Then you must either edit the entry in this location, delete the entry in this location (page 12) or select "Go Back" to choose another location.

4. Use the Alpha Numeric keys to enter a name. The name cannot exceed 14 characters.
 - Use **(←)** and **(→)** to move the cursor to the desired location.
 - Use **(erase)**/delete to delete characters as needed.
 - Press and hold **(erase)**/delete to delete all the characters.
 - If a name is not required, go to step 5.
5. Press **(select)**, 'Store Number' is displayed. The cursor flashes indicating that the display is ready for the number to be entered.
6. Use the number keys to enter the phone number. The phone number cannot exceed 20 digits. Use the **(redial)**/pause to enter a pause in the dialing sequence if required. The display shows a 'P'. Each pause counts as one digit and represents a two second delay of time between the digits. Use **(erase)**/delete to delete digits as needed.
7. Press **(select)**, you will hear a confirmation tone, and the following screen appears. Memory storage is complete. For example, if you store a number into the memory location number 1, the display shows 'Memory 1 Stored'. After about 2 seconds, 'Memory Store' is displayed. Repeat steps 2-7 to store more numbers.
8. Press **(end)** to return to standby mode.

Memory Store
1 ▶
2

Store Name
■

▶ Edit Memory 1
Delete Memory 1
Go Back

Store Number
■

Store Number
8002971023

Memory 1 Stored

Memory Store
1 ▶ UNIDEN AUS
2 <Memory 2>



Numbers stored in one handset can not be accessed from the other.

MAKING CALLS WITH MEMORY DIALING

 
Memory dialing from Standby Mode.

1. Press **(mem)**. The handset displays your programmed memory locations.
2. Press **(^)** or **(v)**, or enter the number **(0 - 9)** to select the memory location you would like to dial.
3. Press **(talk)** 'Talk' and the volume settings are displayed. Then the displayed number is dialed.



Display a Programmed Number

Press **(mem)**. The handset displays your programmed memory locations. Use **(>)** and **(<)** to toggle between the names and numbers displayed.



MEMORY DIALING FROM TALK MODE

1. Press **(talk)**. 'Talk' and the volume setting appears.
2. Press **(mem)**.
3. Enter a number **(0 - 9)** to select the memory location of the desired phone number. The selected phone number is displayed. Then the number is dialed. If the memory location selected does not have a number stored, a series of beeps is sounded.
4. To hang up, press **(end)**.

CHAIN DIALING

On certain occasions after dialing a number, you may be required to enter an access code such as your account number for phone banking. You can enter this number into a memory location for later use by doing the following:

1. Store the access code into one of the memory locations **(0 - 9)** following the steps on page 10.
2. Dial the party or service main number.
3. When you need to enter the special number, press **(mem)** followed by the memory location **(0 - 9)**.

EDITING A STORED NAME AND/OR PHONE NUMBER

1. Press and hold **(mem)**. 'Memory Store' is displayed.
2. Press **(^)** or **(v)**, or enter a number (**(0)** - **(9)**) to select the memory location you would like to edit.
3. Press **(select)**. The memory location is displayed.
4. Press **(select)** to select 'Edit Memory'. The cursor flashes indicating that the display is ready for the name to be edited. When a name has not been stored, the cursor appears at the beginning of the second line.
5. Use the number keys, **(←)**, **(→)**, or **(erase)**/delete to edit the name. To edit only the phone number, skip this step.
6. Press **(select)**. The cursor flashes indicating that the display is ready for the number to be edited.
7. Use the number key, **(redial)**/pause and **(erase)**/delete to edit the phone number. The phone number cannot exceed 20 digits. If you don't want to change the phone number, skip this step.
8. Press **(select)**. You hear a confirmation tone. Memory Storage is complete. For example, if you store a name and number into memory location number 1, the display shows 'Memory 1 Stored'. After about 2 seconds, 'Memory Store' is displayed.
9. Press **(end)** to return to standby mode.

ERASING A STORED NAME AND/OR PHONE NUMBER

1. Press and hold **(mem)**. 'Memory Store' is displayed.
2. Press **(^)** or **(v)** or enter a number (**(0)** - **(9)**) to select the memory location you would like to erase.
3. Press **(select)**.
4. Press **(v)** to move the pointer down to 'Delete Memory'.
5. Press **(select)**.
6. Press **(^)** to move the pointer to 'Yes'.
7. Press **(select)**. A confirmation tone is sounded.
8. After about 2 seconds, 'Memory Store' is displayed. You may delete the information in another memory location (return to step 2) or press **(end)** to return to standby mode.

CALL TRANSFER

CALL TRANSFERS

To have the ability to transfer calls from one handset to the other handset:

Setup:

- Remove the first handset from the main base unit.
- Place the second handset on the main base unit for 5 seconds to initiate the automatic digital code security setting.

TO TRANSFER CALLS

To transfer your call from handset 1 to handset 2:

- Press *transfer*.
- The call is placed on hold on the first handset, while handset 2 begins to ring. The call is transferred when the 2nd handset is answered.
- Repeat the process to transfer the call back to handset 1. Calls can be transferred from either handset.



Memory Location for Rocketdial is independent from memory location for memory dial.



If the Rocketdial does not have a stored number, the handset will beep rapidly and the phone will not dial.

ROCKETDIAL

You can store your most frequent dialed number in the Rocketdial location on each handset. The Rocketdial allows you to dial a number with one key press (there is no need to press **talk**). The phone will automatically dial the number stored).

STORING AND EDITING THE ROCKETDIAL

1. When the phone is in standby mode, press and hold **Rocket Dial**. The following 'Store Number' display appears.
If the following 'Edit Number' screen appears, there is a number already stored. Press **▲** to **▼** to select 'Edit Number' then press **select**.
2. Store the number by following step 6 under "Storing Phone Numbers and Names" on page 10.
3. Press **select**. A confirmation tone is sounded, and 'Number Stored' appears. Memory storage is complete.

Store Number
■

► Edit Number
Delete Number
Go Back

Store Number
800■

MAKING CALLS WITH ROCKETDIAL

When the phone is in the standby mode, simply press **Rocket Dial**. The number stored in the Rocketdial memory location is instantly dialed.

DELETING THE ROCKETDIAL

1. When the phone is in the standby mode, press and hold **Rocket Dial**. The following display appears.
2. Press **▲** or **▼** to select 'Delete Number'.
3. Press **select**. The following display appears.
4. Press **▲** to move the pointer to 'Yes'.
5. Press **select**. A confirmation tone is sounded, and the following display appears. After about 2 seconds, the handset returns to standby mode.

► Edit Number
Delete Number
Go Back

Delete Number?
► Yes
No

Number Deleted

CALLER ID



If you answer a call before the Caller ID message is received (Example: before the second ring), the Caller ID message will not appear.

CALLER ID

You must subscribe to a Caller ID service to use these facilities. When the telephone rings, the Caller ID feature allows you to view the caller's name and phone number on the display before you answer the telephone.

The handset displays the phone number of the incoming call, the name, time and number of calls. Additionally, you can dial the displayed number and store the information for memory dialing.

WHEN THE TELEPHONE RINGS

When the Caller ID message is received, the display shows the caller's phone number along with the date and time. The incoming call information is stored in the Caller ID record. If the Caller ID service includes the callers name, the caller's name appears on the display (currently not supported in Australia or New Zealand).

The date and time received	21/12 12:30PM
Caller's name	JIM STATEN
Caller's phone number	0295979035

Here are some typical displays:

When the mobile phone number and date are received.

21/12 12:30PM Mobile 0295979035

When invalid data is received.

Incomplete Data

When a private number is received.

21/12 12:30PM Private

When an unknown number is received.

21/12 12:30PM Unavailable

When a call is coming from a payphone (Australia only).

21/12 12:30PM PayPhone



In Caller ID operation, if no key is pressed for more than 30 seconds, an error tone sounds and the telephone returns to the standby mode.



If you get an incoming call or page, the deleting operation is cancelled so you can answer the call or page.



Caller ID numbers need to be deleted from each handset separately.

VIEWING THE CALLER ID MESSAGE LIST

The Caller ID list stores information for up to 30 incoming calls - even unanswered calls.

1. Press **(cid menu)**. The summary screen appears. The screen shows the number of new messages and total messages.
2. Press **(V)** to display the latest Caller ID message.
3. Press **(V)** to see the next message. Or press **(^)** to see the previous message.
4. Press **(end)** to return to standby mode.

DELETING INFORMATION FROM THE CALLER ID LIST

The XS916 stores up to 30 messages. If the phone receives the 31st message, the oldest one in the list is automatically deleted. Caller ID data can also be deleted manually.

DELETING A CALLER ID MESSAGE

1. Press **(cid menu)**. Display the message to be deleted from the Caller ID list by pressing **(^)** or **(V)**.
2. Press **(transfer) /delete**.
3. Press **(^)** or **(V)** to select 'Yes' or 'No'.
4. Press **(select)** or **(transfer) /delete**.

When the pointer is at 'Yes':

A tone sounds and the Caller ID message is deleted. The next Caller ID message is then displayed.

When the pointer is at 'No':

The display returns to Caller ID message.

DELETING ALL CALLER ID NAMES AND NUMBERS

1. Press **(cid menu)**.
2. Press **(transfer) /delete**.
3. Press **(^)** or **(V)** to select 'Yes' or 'No'.
4. Press **(select)** or **(transfer) /delete**.

When the pointer is at 'Yes':

A tone sounds all stored Caller ID messages are deleted.

When the pointer is at 'No':

The display returns to the summary screen.



You cannot store a Caller ID message if no phone number appears in the message.

CALLING A PARTY FROM THE CALLER ID LIST

You can place a call from the Caller ID list.

1. Press **cid/memo**. Select the phone number that you want to dial by pressing **V** or **^**.
2. Press **talk**. The displayed phone number dials automatically.

DIAL EDIT

You can temporarily edit the Caller ID number that is displayed by pressing **select**. A cursor appears in the display. Press **erase/delete** to move the cursor left, make your changes and then press **talk**. This will not change the number in the Caller ID list memory.

STORED CALLER ID MESSAGES IN MEMORY DIALING

Messages shown in the Caller ID list can be stored in memory dialing. Using the incoming call information (i.e., Caller ID list), the phone number of the party on the Caller ID can be stored in memory.

1. Press **cid/memo**. Select the phone number to be stored from the Caller ID list by pressing **^** or **V**.
2. Press **mem**.
3. Press **^** or **V** to enter a number (**0** - **9**) to select the memory location to be stored.
4. Press **select**. You hear a confirmation tone and the number is stored in memory. The display returns to the Caller ID list.
5. Press **end** to return to standby mode.

If a message has already been stored in the selected memory number location, a confirmation screen is displayed. Press **^** to select 'Yes'. Press **select** to replace. The display returns to the Caller ID list.

TROUBLESHOOTING

The status light won't illuminate when the handset is placed on the base.	<ul style="list-style-type: none"> • Make sure the AC adaptor is plugged into each base and wall outlet. • Make sure the handset is properly seated in the base. • Make sure the charging contacts on each handset and base are clean.
The audio sounds weak and/or scratchy	<ul style="list-style-type: none"> • Move the handset and/or base to a different location away from metal objects or appliances and try again. • Press (select) /channel while on a call to change the operating channel. • Make sure that you are not too far away from the base.
Can't make or receive calls.	<ul style="list-style-type: none"> • Check both ends of the telephone line cord are plugged in firmly. • Make sure the AC adaptor is plugged into the base and wall outlet. • Disconnect the AC adaptor for a few minutes, then reconnect it. • Make sure that you are not too far from the base. • Charge the handset.
The handset doesn't ring or receive a page.	<ul style="list-style-type: none"> • The battery pack may be weak. Charge the battery for 20-25 hours. • The handset may be too far away from the base unit. • Place the base unit away from appliances or metal objects.
Handset number 1 or number 2 not working.	<ul style="list-style-type: none"> • Place one handset at a time on the main base for 5 seconds each.
The Caller ID does not display.	<ul style="list-style-type: none"> • The handset was picked up before the second ring. • The call was placed through a switchboard. • Call your local telephone company to verify your Caller ID service is current.
If you still have a problem.	Australia: www.uniden.com.au New Zealand: www.uniden.co.nz

MEMO

MEMO

MEMO

MEMO

WARRANTY

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.
Warrantor: Uniden Australia Pty Limited A.B.N. 58 001 865 498
Uniden New Zealand Limited

ELEMENT OF WARRANTY: Uniden warrants to the original retail owner for the duration of this warranty, its XS916 (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is; (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden. (C) Improperly installed, (D) Repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty. (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, (F) Warranty is only valid in original country of purchase.

PARTS COVERED: This warranty covers for one (1) year, the Base Unit and Handset only. All accessories (AC Adaptor etc) are covered for 90 days only.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service. **THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.**

PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY: In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (eg. a copy of the sales docket), to the warrantor at:

UNIDEN AUSTRALIA PTY LIMITED
SERVICE DIVISION
345 Princes Highway,
Rockdale NSW 2216
Fx (02) 9599 3278
www.uniden.com.au

UNIDEN NEW ZEALAND LIMITED
SERVICE DIVISION
150 Harris Road,
East Tamaki, Auckland
Fx (09) 274 4253
www.uniden.co.nz

Customers in other states should ship or deliver the Product freight pre-paid to their nearest Uniden Authorised Repair Centre (Contact Uniden for the nearest Warranty Agent to you).

THANK YOU

FOR PURCHASING A UNIDEN PRODUCT

Uniden

© Uniden Australia Pty Limited
Uniden New Zealand Limited
Printed in China
UCZZ01422BA