

Support/Warranty
www.uniden.com.au
www.uniden.co.nz

Uniden[®]

© 2009 Uniden Australia Pty. Limited
Uniden New Zealand Limited. Printed in PRC.

Uniden[®]


WPSiPT Wireless Power Pad Device Adaptor for iPod touch



WildCharge
WIRE-FREE POWER

QUICK START **GUIDE**

1 Overview

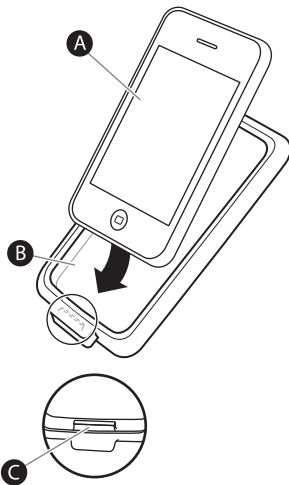

- A. iPod touch
- B. Wireless Power Pad Device Adaptor (Skin)
- C. Connector plug

2 Installation

1. Carefully insert the iPod touch into the Skin, first making sure the connector plug (C) seats firmly in place.
2. Use your fingers to stretch the Skin over the top of the iPod touch.
3. You are now ready to enjoy wire-free charging.



3 Operation

1. Place the Wireless Power Pad enabled iPod touch on to the Wireless Power Pad making sure it rests fully on the pad.
2. While charging, (1) the charge pad's blue LED will turn on and (2) the iPod touch display will show battery charging.
3. You are now experiencing wire-free charging.